



PRESTO |

USB In-System Programmer



Reference Manual

ASIX s.r.o.
Staropramenna 4
150 00 Prague
Czech Republic

www.asix.net

support@asix.net

sales@asix.net

ASIX s.r.o. reserves the right to make changes to this document, the latest version of which can be found on the Internet.

ASIX s.r.o. renounces responsibility for any damage caused by the use of ASIX s.r.o. products.

© Copyright by ASIX s.r.o.

Table of Contents

1 Introduction	9		
2 PRESTO	10		
2.1 Package Content	10		
2.2 Features	10		
2.3 Quick Start	10		
2.3.1 Windows	10		
2.3.2 Linux	11		
2.4 Use	11		
2.4.1 Numerous Supported Devices	11		
2.4.2 USB Connection	11		
2.4.3 Programming of Placed Devices	11		
2.4.4 Programming of Autonomous Devices	12		
2.4.5 Programming Interface	12		
2.4.6 Power Supply From Application	12		
2.4.7 User Interface	12		
2.4.8 Software	12		
2.4.9 Debugging	13		
2.5 Controls and Connectors	13		
2.5.1 Programming Connector	13		
2.5.2 GO Button	14		
2.5.3 LED Indicators	14		
ON-LINE	14		
ACTIVE	14		
2.5.4 USB Connector	14		
2.6 Connecting to Application	15		
2.6.1 Custom-made Connecting Cable	15		
2.6.2 Programming in ZIF Socket	15		
		2.6.3 Connecting Procedure	16
		2.6.4 Connection Examples	17
		PIC Microcontrollers	17
		AVR Microcontrollers	18
		AVR with TPI Interface (e.g. ATtiny10)	18
		Atmel 8051	19
		Cypress PSoC	19
		MSP430 with TEST pin without SBW interface	20
		MSP430 / CC430 with SBW interface	20
		TI (Chipcon) CCxxxx	21
		I2C Memory Chips	21
		SPI Memory Chips	21
		Microwire Memory Chips	22
		JTAG Interface	22
		2.7 HPR Adapters	23
		2.7.1 HPR3V3	23
		Using	23
		2.7.2 HPR1V2	23
		Usage	23
		2.7.3 HPRAVR Adapter	24
		Use	24
		2.8 Built-in Protection	25
		2.9 Technical Specifications	25
		2.9.1 Limit Values	25
		2.9.2 Operating Specifications	25
		2.9.3 Declaration of Conformity	26
		3 DRIVERS	28
		3.1 Driver Installation	28

3.1.1	Windows Operating Systems	28			
	Windows 7 and later	28			
	Older supported Windows versions	28			
3.1.2	Linux	29			
3.2	Driver Updating	29			
4	UP SOFTWARE	30			
4.1	Abbreviations Used	30			
4.2	Installation	30			
4.3	Device Programming	30			
4.3.1	Programmer Selection	30			
4.3.2	Projects	31			
4.3.3	Device Type Selection	31			
4.3.4	Program settings	32			
	Delay for VDD switching on/off when supplied from programmer	32			
	Production Programming Settings	33			
	Settings for Programming During Development	33			
	Programmer Settings	34			
	Fuses and Working with Them	34			
4.3.5	Programming	34			
	Differential Programming	35			
4.4	Further Features	35			
4.4.1	Setting the GO Button	35			
4.4.2	Mass Production	35			
4.4.3	Serial Numbers	36			
	Format of Files with Serial Numbers	37			
	Data Record	38			
	Example of File with Serial Numbers	38			
4.4.4	Calibration Memory Support	38			
	Working with Calibration Memory When Erasing a Device in UV Eraser	38			
	Working With Calibration Memory in Devices With Flash Memory	39			
4.5	Program Controls	39			
4.5.1	Toolbar	39			
4.5.2	Status Bar	40			
4.5.3	Menus	40			
	File Menu	40			
	File → New	40			
	File → Open...	40			
	File → Open next file...	40			
	File → Reload actual file	40			
	File → Save	41			
	File → Save as...	41			
	File → Import data memory from file...	41			
	File → Open file with data memory automatically	41			
	File → New project	41			
	File → Open project...	41			
	File → Save project...	41			
	File → Close project	41			
	File → Recent projects	41			
	File → Read calibration data...	42			
	File → Save calibration data...	42			
	File → Export to bin...	42			
	File → Exit	42			
	Edit Menu	42			
	Edit → Fill with value...	42			
	Edit → Text insert...	42			
	Edit → Fill selected location with RETLW	43			
	View Menu	43			
	View → Code/main memory	43			
	View → Data memory	43			
	View → Boot memory	43			
	View → Configuration memory	43			
	View → Console	43			

View → Display code/main memory	43	Options Menu	47
View → Display data memory	43	Options → Program settings → Programming	47
View → Display configuration memory	43	▶ Reload file before every programming	47
View → Display programmer form	43	▶ Warn before file load, when data in some editor have been changed	48
Device Menu	44	▶ Warn, when the loaded file has not changed	48
Device → Program	44	▶ Ask before erasing	48
▶ Program all	44	▶ Ask before programming of OTP / Flash / Code/Data Protection / differential	48
▶ Program all except data memory	44	▶ Display fuse warning messages	48
▶ Program code/main memory	44	▶ Except for programming: Close status window	48
▶ Program data memory	44	▶ After programming: Close status window	48
▶ Program configuration memory	44	▶ Beep after successful finishing	48
▶ Program differentially	44	▶ Beep after unsuccessful finishing	48
▶ Differential program data memory	44	▶ Turn off all sound for UP	48
▶ Mass Production	45	▶ Delay for VDD switching on/off when supplied from programmer	48
Device → Read	45	▶ Do not perform blank check before cfg word programming	49
▶ Read all	45	▶ Do not perform blank check after erasing	49
▶ Read all except data memory	45	▶ Do not erase device before programming	49
▶ Read code/main memory	45	▶ Do not erase data memory before its programming	49
▶ Read data memory	45	▶ Do not verify unprogrammed words at the end of the memory	49
▶ Read configuration memory	45	▶ Do not verify	49
Device → Verify	45	▶ Verify with two supply voltages	49
▶ Verify all	45	Options → Program settings → Panels	49
▶ Verify all except data memory	45	▶ Display selected device on toolbar	49
▶ Verify code/main memory	45	▶ Display selected programmer on toolbar	50
▶ Verify data memory	46	▶ Display the status bar in the lower part of the window	50
▶ Verify configuration memory	46	▶ Display icons on toolbar buttons	50
Device → Erase	46	▶ Display descriptions on toolbar buttons	50
▶ Erase all	46	▶ Show mass production counter in status bar	50
▶ Erase code/main memory	46	Options → Program settings → Files	50
▶ Erase data memory	46	▶ File save style	50
Device → Blank check	46		
▶ Blank check all	46		
▶ Blank check all except data memory	46		
▶ Blank check of code/main memory	46		
▶ Blank check of data memory	46		
▶ Blank check of configuration memory	47		
Device → Select device	47		

▶ Automatically check for newer versions of actual file	50	▶ Number base	53
▶ Check device type when loading .hex file	50	▶ Code as ASCII	53
▶ Save device type into .hex file	50	▶ Initial serial number	53
▶ Warn when loaded HEX does not contain CFG memory data	51	▶ Next S/N	53
▶ Warn when loaded HEX is not aligned to word size.	51	▶ Destination	54
▶ Binary file loading and saving style	51	▶ Hexadecimal address of first word	54
▶ Save unused locations to .hex file	51	▶ Fill with RETLW instruction	54
▶ Clear code/main / data memory / ID positions before file reading	51	▶ Characters per word	54
▶ Erase configuration memory before file reading	51	▶ Sequence	54
▶ Read data memory not from the file but from the device	51	Options → Program settings → Checksum	54
▶ Read ID positions not from the file but from the device	52	▶ Show checksum in status bar	54
▶ Project saving style	52	▶ Checksum algorithm	54
Options → Program settings → Colors	52	Options → Program settings → Others	54
Options → Program settings → Editors	52	▶ Update check settings	54
▶ Code/main memory editor: show words as bytes	52	▶ Allow internal and external supply voltages collision	54
▶ Code/main memory editor 8 words wide	52	▶ Do not show warning if internal 5 V is switched on with 3.3 V device	55
▶ Data memory editor 8 words wide	52	▶ Allow to change supply voltage level when it is on	55
▶ Boot memory editor 8 words wide	52	▶ Allow external supply voltage for devices requiring VPP before VCC.	55
▶ Show only the lowest byte of word in ASCII	52	▶ Pin T during programming	55
▶ Mask ID positions while reading from device, from file, etc.	52	▶ Pin T after programming	55
▶ Mask ID positions during direct user input	52	Options → Select programmer	55
▶ Configuration memory editor: show cfg word instead of fuses	52	Options → Language selection...	55
Options → Program settings → Serial numbers	53	Options → Keyboard shortcuts...	56
▶ Serial numbers	53	Help Menu	56
▶ Prepare S/N before programming	53	Help → Help on program	56
▶ Find successor after programming	53	Help → List of supported devices	56
▶ Prepare S/N after programming	53	Help → Check Internet for updates	56
▶ Serial number interval	53	Help → ASIX website	56
▶ Log to file	53	Help → About	56
▶ Serial number length (the number of characters)	53	4.5.4 Programmer Settings Window	56
		FORTE Programmer Settings Window	56
		Power supply from the programmer	56
		In idle state	56
		During programming	56

Reset	56	► End address	59
Settings Associated with PIC Microcontrollers	56	4.5.5 HEX Editor Windows	59
► Programming method	57	Selecting an Area	59
► Use PE	57	Code/Main Memory Editor	59
Boot memory programming	57	Data Memory (EEPROM) Editor	59
Settings Associated with AVR and 8051 Microcontrollers	57	Configuration Memory Editor	60
Oscillator frequency	57	Tips for Advanced Users	60
Faster Programming with Slow Clock	57	4.6 Running UP from Command Line	60
Inverse Reset	57	4.6.1 List of Parameters	60
HVP	57	Using a Project File	62
Settings Associated with I2C Memory Chips	57	Examples of Use	62
I2C Bus Speed	57	File Opening	62
I2C Memory Address	57	Device Programming	62
Settings Associated with SPI Flash Chips	57	4.6.2 Program Return Codes	62
► Start address	57	4.7 Running UP by Means of Windows Messages	63
► End address	57	4.7.1 List of Commands	63
PRESTO Programmer Settings Window	58	Example of use	65
In idle state	58	4.8 UP_DLL.DLL Library	65
During programming	58	4.9 Running More Than One Instance of UP	66
Settings Associated with PIC Microcontrollers	58	4.10 Access of More UP Instances to One Programmer	67
MCLR Pin Control	58	4.11 Updating UP	67
Programming Method	58	4.12 Appendix A UP_DLL.DLL	67
Algorithm Programming	58	4.12.1 Data Types	67
Use PE	58	4.12.2 List of UP variables	67
Boot memory programming	58	4.13 Appendix B: Use of ICSP	75
Settings Associated with AVR and 8051 Microcontrollers	58	4.13.1 Pins Used for Programming	75
Oscillator Frequency	58	HVP Algorithm	76
Faster Programming with Slow Clock	58	LVP algorithm (without VPP)	76
Inverse Reset	58		
HVP	59		
Settings Associated with I2C Memory Chips	59		
I2C Bus Speed	59		
I2C Memory Address	59		
Settings Associated with SPI Flash Chips	59		
► Start address	59		

Loading of Different Programmer Pins	76	6.2.7 Default Settings	85
4.13.2 Power Supply Options	76	Default Settings for FPGAs	85
Power Supply Capacities in Application	77	Default Settings for XC9500	85
4.13.3 ICSP Connector	77	Default Settings for AVR:	85
4.14 Appendix C: Intel-HEX File Format	78	6.3 Running JTAG Player from Command Line	86
4.14.1 Supported Alternatives of HEX Files	78	7 TROUBLE-SHOOTING	87
4.14.2 Description of Intel-HEX File Format	78	7.1 Tips and Tricks	87
Data Record	78	7.2 PRESTO Tester	87
End of File	79	8 Document history	89
Extended Linear Address	79		
Saving Device Type in .hex File	79		
5 PRESTO.DLL Library	80		
6 JTAG PLAYER	81		
6.1 JTAG Device Programming	81		
6.1.1 SVF File	81		
Examples of How to Create SVF Files	81		
State of .svf File Implementation	82		
6.1.2 XSVF File	82		
Examples of How to Create XSVF Files	82		
State of XSVF File Implementation	83		
6.1.3 Programming Connector	83		
6.2 Settings	83		
6.2.1 Default TCK signal frequency	83		
6.2.2 Fast Clocks Option (FORTE only)	84		
6.2.3 RUNTEST without run_count (SVF only)	84		
6.2.4 RUNTEST Timing Multiply (both SVF and XSVF)	84		
6.2.5 RUNTEST with run_count and no timing (both SVF and XSVF)	84		
6.2.6 VPP PRESTO / P FORTE pin usage while running test (file) / after test completion	85		

1

Introduction

This manual describes PRESTO, a USB programmer and its control software, both manufactured by ASIX.

Chapter 1 gives you ‘quick start’ instructions on how to start working with the programmer, offers examples of its connecting to applications and provides technical specifications.

Chapter 2 focuses on the installation of drivers and software updates.

Chapter 3 introduces the UP program, which is software used for controlling all ASIX programmers. You can find procedures there for setting up the programmer prior to programming, for actual programming and/or verification of devices. It also describes how to control the software from a command line or a DLL library.

Chapter 4 presents the JTAG SVF Player software used for programming devices with the JTAG interface using .svf/.xsvf files.

Chapter 5 offers tips and tricks in case of experiencing difficulties with programming.

Abbreviations & Terms Used

HVP	(High Voltage Programming) is a programming mode in which a higher voltage than the power-supply voltage is applied to pin P in the initial phase.
ICSP	(In-Circuit Serial Programming). The meaning of ICSP is identical with the meaning of ISP (In System Programming) in this manual, i.e. device programming done inside a system.
LVP	(Low Voltage Programming) is a programming mode in which none of the pins has higher than the power-supply voltage applied.
PDI	Program and Debug Interface
SBW	(SPY-BI-WIRE) MSP430 microcontroller interface
TPI	Atmel Tiny Programming Interface
VCC	If the text features VCC or VDD, they mean the power-supply voltage on the VDD pin, which can serve as either input or output depending on the particular application.
VPP	If the text features VPP, it means the programming voltage on pin P of devices with High Voltage Programming.

The term “file” means a file with data to be programmed in context of this manual, in other cases a particular type of file is specified.

A file with .hex extension means Intel-HEX file whilst a file with .bin extension means binary file.

2

PRESTO

Thank you for buying the PRESTO programmer made by ASIX s.r.o. It was a wise decision. Feel free to contact our technical support in case of any questions or doubts.

2.1 Package Content

Your PRESTO package should include:

- PRESTO programmer
- ICSPCAB8 cable
- USB cable (type A - B)
- CD-ROM with manual and drivers
- Info leaflet

2.2 Features

PRESTO is a fast USB In-System programmer suitable for programming a range of devices such as microcontrollers, EEPROM or Flash serial memory chips, CPLD, FPGA and many others.

- USB 1.1 (USB 2.0 compatible) interface, programmer powered via USB
- 3 MHz in/out
- synchronous programming, JTAG support
- programming voltage from 2.7 V to 5.5 V
- feeds applications with 5 V
- overcurrent protection on VDD and VPP sources

- overvoltage protection on VDD pin
- GO button for quick function selection
- more than one simultaneously running programmer per PC, command line support, support for Windows messages and for DLL
- Windows XP or later, Linux (Wine)
- compact

2.3 Quick Start

Please install the drivers and the UP software prior to the first use of PRESTO.

2.3.1 Windows

Administrator rights are required to run the software for the first time.

Start with installing the UP program. Its installer installs the USB driver for PRESTO, too. You can find the installer on the supplied CD-ROM or on the web (the preferred option).

Once the installation is complete, connect the PRESTO programmer to your computer.

The driver contained in the UP installer is intended for Windows 7 and later. For older Windows operating system versions the driver has to be downloaded from www.asix.net, from download section of the programmer and unpacked somewhere. After the programmer has been connected, the operating system asks for the driver. In "Found New Hardware" dialog the path to the unpacked driver has to be set.

The green ON-LINE LED should turn on after a few moments and the Windows Device Manager should present the programmer as correctly installed.

2.3.2 Linux

The programmer can be operated under Wine in Linux. Please find detailed installation instructions at http://www.asix.net/supp_linux.htm

2.4 Use

PRESTO is a fast USB programmer suitable for programming of a range of devices such as microcontrollers, EEPROM or Flash serial memory chips, CPLD, FPGA and many others. It is equipped with overcurrent protection at the VDD and VPP sources and with overvoltage protection at the VDD pin.

The programmer is powered via USB. It can feed the application to be programmed with a voltage of 5 V or it can utilize an external application's voltage of 2.7 V to 5.5 V during programming.

The programmer may run under Windows XP or later or under Linux in Wine.

2.4.1 Numerous Supported Devices

The list of supported devices includes:

- **Microchip PIC** microcontrollers – devices with serial programming, which include all PIC and dsPIC devices with the exception of several obsolete types.
- **Atmel AVR** microcontrollers – all devices supporting "SPI Low Voltage Serial Downloading" such as ATtiny12, AT90S8535 or ATmega128.
- **Atmel ATxmega** microcontrollers – devices programmable via JTAG interface such as ATxmega128A1.
- **Atmel AVR32** microcontrollers – AT32UC3A1256, for example.

- **Atmel 8051** microcontrollers – devices that support ISP programming such as AT89S8253, AT89LP4052, AT89LP216 or AT89S2051.
- **Texas Instruments** microcontrollers – 16-bit MSP430, CC430 (fuse programming is not supported for these families) and CCxxxx.
- **Cypress** – PSoC microcontrollers.
- **Serial EEPROM** and **Flash** memory chips - I2C (24LCxx), Microwire (93LCxx) and SPI (25Cxx).
- Devices with **JTAG** interface, for which an SVF or an XSVF file can be created. These include CPLD (such as Xilinx XC95xx and CoolRunner), configuration memory for FPGA (such as Xilinx XC18Vxx and XCFxxS), microcontrollers (such as ATmega128) and others.

This, however, is not an exhausting list of possibilities. Additional types are regularly supplemented in response to customers' interest. New software versions are downloadable from the Internet for free.

2.4.2 USB Connection

PRESTO is controlled and powered through a USB port. It communicates in the Full-Speed mode and works with a USB 2.0 port or a USB 1.1 port. This means that connecting the programmer is fast and easy, requiring only a single cable.

2.4.3 Programming of Placed Devices

ISP (In-System Programming) or the special ICSP (In-Circuit Serial Programming) for the PIC microcontrollers is currently replacing the traditional method in which devices were first programmed and only then placed on a PCB (printed circuit board). Thanks to ISP even SMD devices with an extremely narrowly spaced pins can easily be programmed and their firmware upgraded in already assembled and finished devices.

2.4.4 Programming of Autonomous Devices

Those who still need to program autonomous devices, i.e. devices not yet placed on a PCB can use the ISP2ZIF adapter featuring a ZIF (zero insertion force) socket.

2.4.5 Programming Interface

Devices to be programmed are connected through a 8-pin ISP connector, which is backward compatible with the ICSP connector for PIC microcontrollers.

2.4.6 Power Supply From Application

The VDD output can serve as an input using the power from the application for feeding the output buffers with a voltage from 2.7 V to 5.5 V or it can become an output and as such to provide voltage for the application. PRESTO can power applications with 5 V voltage.

PRESTO detects three levels of external power supply voltage: 3 V, 5 V and overvoltage.

PRESTO includes an overcurrent protection at pins P and VDD.

The voltage range can be extended by two optional adapters (HPR3V3, HPR1V2).

HPR3V3 is an optional accessory for PRESTO by which PRESTO can power applications with 3.3 V voltage.

HPR1V2 is an optional accessory for PRESTO which extends input voltage of VDD pin in power from application mode from 1.2 V to 3.3 V.

2.4.7 User Interface

The programmer status is clearly indicated by two LEDs. ON-LINE (green LED) informs of connecting to USB while ACTIVE (yellow LED) signals an activity of the programming interface.

The GO button significantly increases the operator's comfort in repeated programming. It starts programming or other user-defined commands.

2.4.8 Software

The UP program is a basic software tool for working with PRESTO, also compatible with the FORTE programmer.

Apart from standard commands, UP provides numerous above-standard functions, which broaden the programmer's applications and simplify its operation. These include the possibility to define projects, existence of adjustable parameters when running from the command line providing for unattended programmer operation in routine programming, environment personalization incl. keyboard shortcuts, automatic generation of serial numbers, etc.

UP has been developed for Windows XP or later. It also works under Linux (through Wine).

Modified drivers developed by FTDI are used for communication through USB.

Devices with the JTAG interface, for which an SVF or an XSVF file can be created, can be programmed by means of the JTAG SVF Player software.

The voltage at the VDD pin is permanently displayed in UP for greater comfort and for monitoring of the operation. The reset signal is conveniently controlled by a single button.

2.4.9 Debugging

PRESTO provides user with support for debugging ARM microcontrollers through OpenOCD which is an open source debugging system originally developed by Dominic Rath. OpenOCD uses GDB for access to debug functions. User can communicate with OpenOCD via a command line and telnet.

The revision 717 of OpenOCD, which can be found on our website in a program package together with the ARMINE program, is supported officially.

2.5 Controls and Connectors



Fig.2: The PRESTO programmer

PRESTO features two LEDs, a button, a connector for linking to USB and a programming connector.

2.5.1 Programming Connector

The programming connector is a 8 way single row plug with pin No. 2 (in standard numbering) missing. Spacing between pins is 2.54 mm.

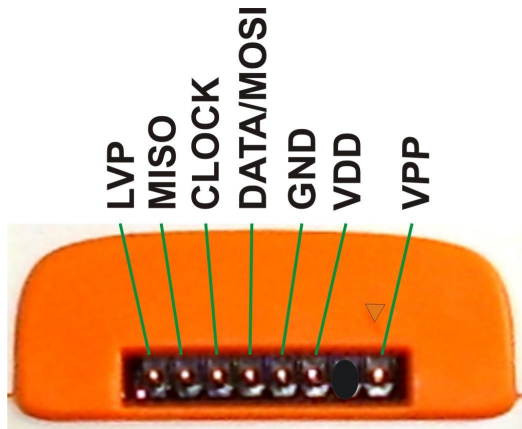


Fig.3: Programming connector

Pin	Name	Type	Description
P1	VPP	I/O, VPP	signal input/output or VPP output
P2			key
P3	VDD	PWR	power input/output
P4	GND	PWR	signal grounding
P5	DATA/ MOSI	I/O	signal input/output
P6	CLOCK	O	signal output
P7	MISO	I	signal input
P8	LVP	I/O	signal input/output

Table 1: programming connector

2.5.2 GO Button

This button simplifies work with the application being programmed. It triggers device programming or another pre-programmed function. For further information on settings see [Setting the GO Button](#)

2.5.3 LED Indicators

ON-LINE

The green LED informs you that PRESTO is connected to a computer and that the computer and the programmer “understand each other”, i.e. drivers are installed and work correctly.

In Linux, the green LED turns on upon connecting the programmer to a PC even before the driver is correctly installed.

ACTIVE

The yellow LED informs you that there is ongoing communication between the programmer and a device.

2.5.4 USB Connector

A standard USB (type B) connector is provided for connecting to a computer. The programmer uses the USB Full-Speed interface for communication.

2.6 Connecting to Application

The programmer should be connected to an application to be programmed with an ICSPCAB8 which is designed for 2.54 mm spacing.

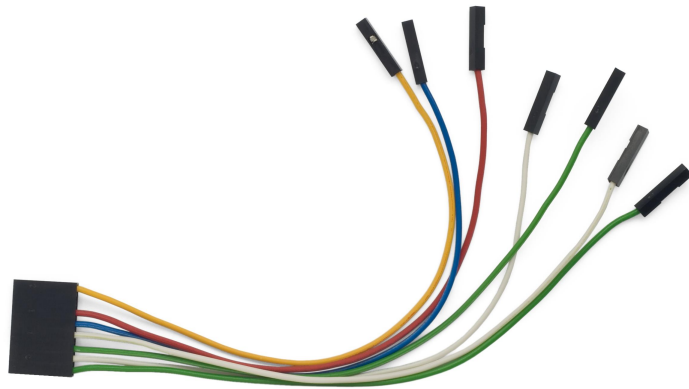


Fig.4: ICSPCAB8

2.6.1 Custom-made Connecting Cable

Should an application to be programmed have a non-compatible type of connector for linking to the programmer, the customer can make his/her own programming cable. Its length should not exceed 15 cm.

The following table lists markings of connectors by FCI Electronics suitable for making a custom cable. Of course, it is possible to use any similar ones:

FCI marking	Description
65039-036LF	housing, 1 pin
65039-029LF	housing, 1 x 8 pins
47217-000LF	pin

Table 2: ICSP cable - material list

A cable with a cross-section between 0.1 and 0.3 mm² may be used for making the custom connecting cable.

2.6.2 Programming in ZIF Socket

If programming of autonomous device is required, i.e. those that are only later connected to an application, it is possible by means of our optional ISP2ZIF accessory.

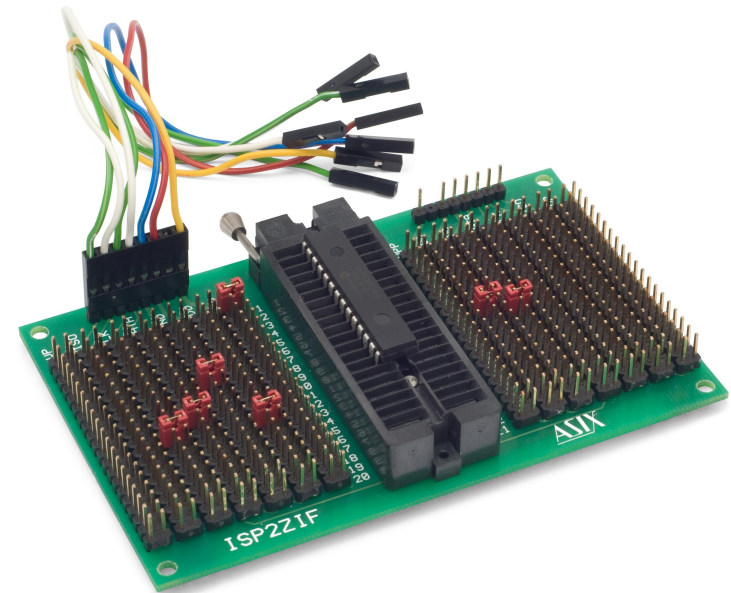


Fig.5: ISP2ZIF

ISP2ZIF consists of a zero insertion force (=ZIF) socket and an ICSP connector for connecting to the programmer,

which can also provide voltage for feeding the program circuitry.

2.6.3 Connecting Procedure

The correct procedure for connecting the programmer: first connect PRESTO to the target application, then connect PRESTO to the USB and finally turn on the application's power supply.

Please make sure that the GND of the application, the programmer and the USB are interconnected before signals and the power are applied.



Important warning

If an application is powered by a switched power source or is not grounded, a significant voltage difference may appear between the programmer's ground and the application's ground. This could damage the programmer.

The simplest way of connecting the GND prior to the other signals is to ground the application before connecting it to the programmer. This can, for example, be achieved by making the GND pin of the application's ICSP connector longer than the other pins. It will make sure that both grounds are interconnected first.

Pin	AVR	AVR TPI	8051	JTAG
P1	RESET	RESET	RESET	USR
P2				
P3	VCC	VCC	VCC	VDD
P4	GND	GND	GND	GND
P5	MOSI	TPIDATA	MOSI	TDI
P6	SCK	TPICLK	SCK	TCK
P7	MISO		MISO	TDO
P8			SS	TMS

Table 3: Connection list No.1

Pin	PIC	MSP430	MSP430 SBW	TI CCxxxx
P1	MCLR	TEST		RESET
P2				
P3	VDD	VCC	VCC	VDD
P4	VSS	VSS	VSS	GND
P5	PGD	TDI	SWBTDIO	Debug data
P6	PGC	TCK	SWBTCK	Debug clock
P7		TDO		
P8	LVP	TMS		

Table 4: Connection list No.2

Pin	PSoC	I ² C	SPI	Microwire
P1	XRST		CS	CS
P2				
P3	VDD	VDD	VDD	VDD
P4	VSS	GND	GND	GND
P5	ISSP-data	SDA	SI	DI
P6	ISSP-SCLK	SCL	SCK	CLK
P7			SO	DO
P8				ORG (PRE)

Table 5: Connection list No.3

2.6.4 Connection Examples

The following text presents examples of connections between PRESTO and the device being programmed. We use a notation according to the manufacturer datasheet of each particular device.

PIC Microcontrollers

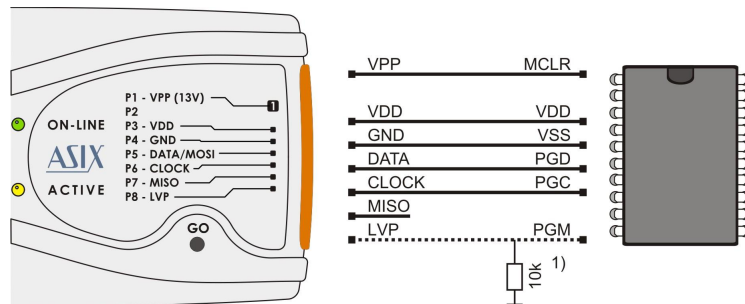


Fig.6: PIC microcontroller

1) Not all PIC microcontrollers have the PGM pin. The PGM pin can be connected to programmer's L pin, to VSS via a pull-down resistor (for HVP programming) or to VDD via a pull-up resistor (for LVP programming).

- 2) The whole device must be erased before programming if code/main memory protection (CP) or data memory protection (CPD) is active.
- 3) Some PIC devices cannot be erased with CP or CPD active being powered by voltage less than 5 V.
- 4) If a microcontroller has more than one power-supply VDD or VSS pin, all of them must be connected including the AVDD and AVSS pins.
- 5) PIC microcontrollers which require 3 V or lower power supply must be fed from external power supply because PRESTO can only provide 5 V voltage.
- 6) Some PIC microcontrollers require voltage less than 13 V on the MCLR pin while the programmer can only set 13 V voltage level on VPP. If such device has been selected in UP, a warning message is displayed. It is recommended to limit voltage on the MCLR pin by an external circuit (a potential divider or a Zener diode and a resistor).
- 7) If the LVP mode is used, it is recommended to check whether the LVP fuse is still set after erasing the part.
- 8) Programming of PIC32 devices is supported by means of the ICSP interface only with external 3 V power supply.
- 9) Devices with an ICPORT fuse must have the dedicated ICSP port off for LVP programming.
- 10) PIC24 and dsPIC33 devices may be programmed using PE (Programming Executive) or using the standard method. Programming by means of PE is usually faster.
- 11) Programming of some new PIC microcontrollers in the HVP mode can cause that a warning message indicating overcurrent on VPP appears. If that message does not indicate a real fault it could be caused by different technology which has been used by Microchip for producing new devices, although they are from pristine families. These devices have slightly different parameters. It could be solved by connecting capacitor of 1 nF between the VPP pin and GND and resistor of 10 Ω in serial with VPP signal if the fault persists.

AVR Microcontrollers

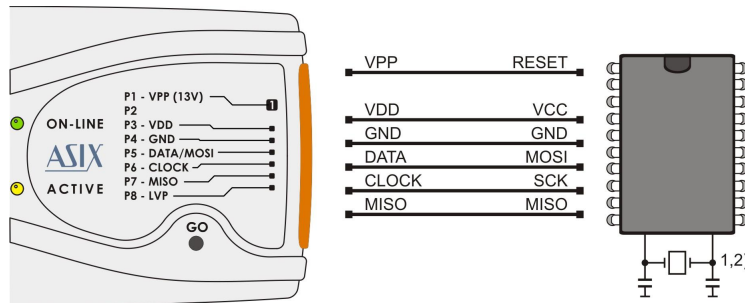


Fig.7: AVR microcontroller

- 1) A source of the clock signal, which is set in the device or which will be set by fuses during programming must be connected to the device. A crystal must be connected if set up as the clock source.
- 2) Device fuses have been set up by the producer to the internal oscillator with a frequency of 1 MHz. In the initial programming, the device should be programmed with "Oscillator frequency" set up at ">750 kHz" or lower in the "**PRESTO programmer settings**" window.
- 3) Not all AVR microcontrollers allow use of a crystal (e.g. ATtiny13, ATtiny15).
- 4) After the device fuses are correctly set up, right-click (i.e. using the right mouse button) inside the **Configuration** window and choose **Learn fuses**. This saves the fuses in the up.ini file or in the project if used. This is necessary due to the fact that .hex files for AVR microcontrollers themselves do not contain configuration fuses. If a device is programmed from the command line, a .ppr project file containing saved fuses needs to be used.
- 5) Ticking the **Open file with data memory automatically** option in the **File** menu loads data for the data memory simultaneously with the code/main memory data.

6) Use the EESAVE fuse if preservation of data memory is required. If the EESAVE is active, choose **Program all except data memory** for programming, otherwise a warning appears at this place (blank check of data memory).

7) HPR3V3 is an optional accessory for programming AVR microcontrollers which require 3.3 V voltage with PRESTO internal 5 V power supply.

8) HPRAVR is an optional accessory for programming AVR microcontrollers in applications with the ISP10PIN standard connector on the device's side.

9) Some AVR devices have their ISP interface provided at different pins than the SPI interface. Further information can be found in the device data sheet (in the Serial Downloading section).

AVR with TPI Interface (e.g. ATtiny10)

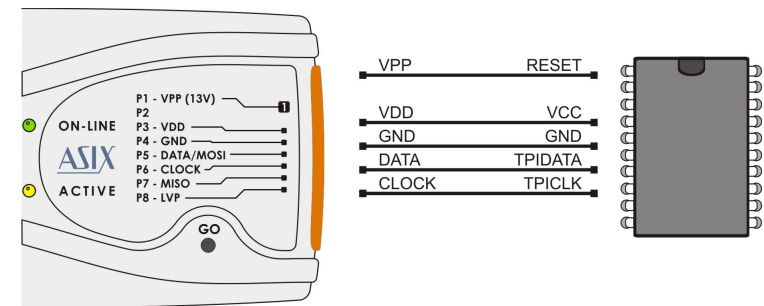


Fig.8: AVR microcontroller, TPI interface

1) These microcontrollers require voltage 12 V on the RESET pin during programming in the HVP mode while the programmer can only set 13 V voltage level on VPP. Therefore it is necessary to limit voltage on the RESET pin by an external circuit. There is no need of any external circuit for the LVP mode which is preferred.

Atmel 8051

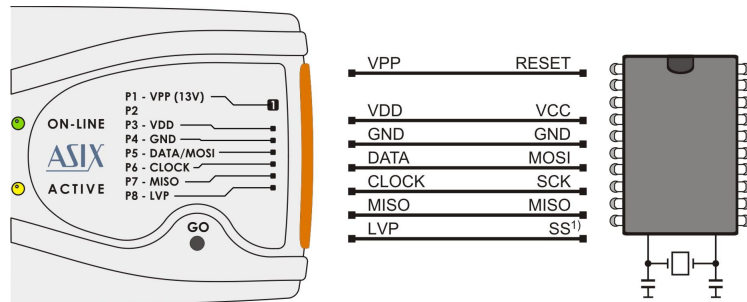


Fig.9: Atmel 8051 microcontroller

- 1)The SS pin must be connected only for AT89LP2052 / 4052 / 213 / 214 / 216 / 428 / 828 / 6440 / 51RD2 / 51ED2 / 51ID2 / 51RB2 / 51RC2 / 51IC2.
- 2)AT89LP213, AT89LP214 and AT89LP216 have the inverse reset logic. Thus an appropriate resistor must be pulled-up to VCC.
- 3)PRESTO can not program devices containing the letter "C" in their name, however, it supports devices with "S" in their name, of which some are compatible with the "C" types. For example, AT89C2051 is not supported, but AT89S2051 is.
- 4)The software assumes that while programming AT89LP52, the device's POL pin is in logical 1. If POL is in logical 0, the **Inverse RESET** option should be activated in the program. AT89LP51RD2, AT89LP51ED2, AT89LP51ID2, AT89LP51RB2, AT89LP51RC2 and AT89LP51IC2 have the inverse reset logic, therefore the software assumes the POL pin in logical 0.

Cypress PSoC

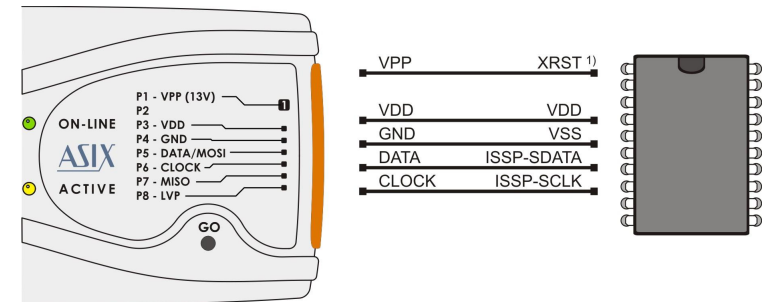


Fig.10: Cypress PsoC microcontroller

- 1)The way of entering in the programming mode should be set in the **PRESTO programmer settings** window. Devices without an XRST pin can only use initialization through the power-on reset (by power supply). Devices with an XRST pin may use both methods, but the method using the reset signal for initialization is better as it can be used in combination with an external power supply.
- 2)**Algorithm programming** in the **PRESTO programmer settings** window should be set in accordance with the power supply cable used.

MSP430 with TEST pin without SBW interface

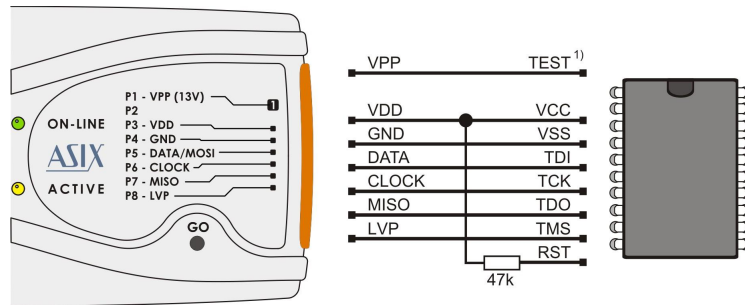


Fig.11: MSP430 microcontroller, TEST pin, without SBW

- 1) Not all MSP430 microcontrollers have the TEST pin.
- 2) This interconnection can be used with e.g. MSP430F1xx, MSP430F4xx, MSP430F21x1, but not with MSP430F20xx or MSP430F22xx.
- 3) If the oscillator calibration values are saved in the information memory and this memory is not going to be re-programmed (erased) during programming, the device should be programmed with the **Cal Int. RC** (=calibrated internal RC oscillator) option selected in the **PRESTO programmer settings** window. In the other cases **Not Cal Int. RC** (=not calibrated internal RC oscillator) should be selected.
- 4) The safety fuse on the JTAG interface cannot be blown by the PRESTO programmer.
- 5) The HPR3V3 adapter should be used for feeding these microcontrollers (without the SBW interface) from PRESTO internal 5 V power supply.

MSP430 / CC430 with SBW interface

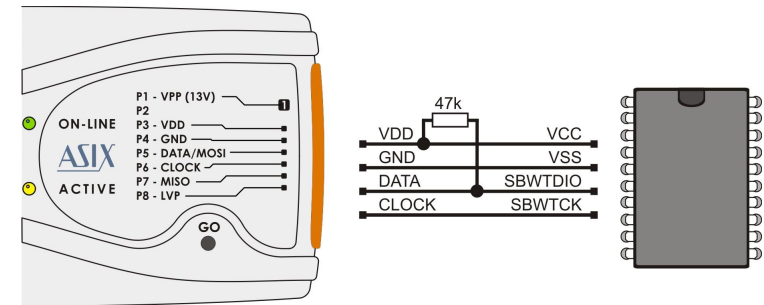


Fig.12: MSP430 / CC430 microcontroller, SBW

- 1) Microcontrollers with SBW interface could be programmed only through this interface. It concerns e.g. MSP430F20xx, MSP430F22xx or MSP430F5xxx.
- 2) If the oscillator calibration values are saved in the information memory and this memory is not going to be re-programmed (erased) during the programming process, the device should be programmed with the **Cal Int. RC** (=calibrated internal RC oscillator) option selected in the **PRESTO programmer settings** window. In the other cases **Not Cal Int. RC** (=not calibrated internal RC oscillator) should be selected. There is no need to select the oscillator for the MSP430F5xxx and CC430 devices.
- 3) The safety fuse on the JTAG interface cannot be blown by the PRESTO programmer.
- 4) **Speed** in the **PRESTO programmer settings** window should be slow down if any external capacitor is connected to the device's **reset** pin.
- 5) The PRESTO programmer also erases the Segment A of the information memory with the **Erase Segment A** option selected.

TI (Chipcon) CCxxxx

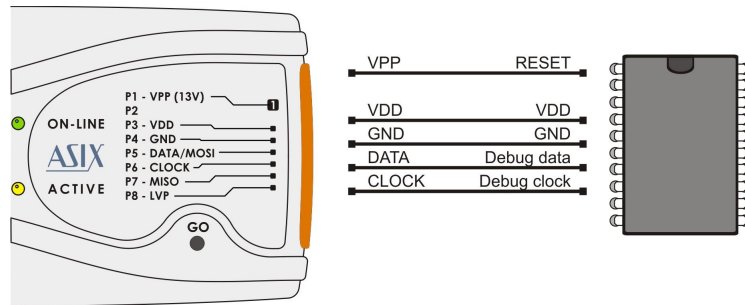


Fig.13: TI (Chipcon) Ccxxxx microcontroller

I2C Memory Chips

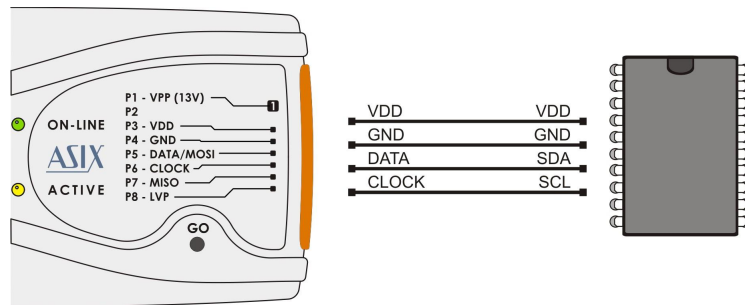


Fig.14: I2C memory chips

- 1)The programmer uses an internal 2.2 kΩ pull-up resistor on the data wire (SDA) when working with an I2C device.
- 2)If the device to be programmed is 24LC(S)21A or 24LC(S)22A, its VCLK pin must be connected to VDD during programming.

- 3)34xx02 memory chips need “high” voltage at the A0 pin for commands protecting it against SWP and CSWP recording. The “high” voltage is generated at pin P, which must be connected to pin A0 in this case. The memory chip pins A0, A1 and A2 must be connected manually according to the selected protection mode.

SPI Memory Chips

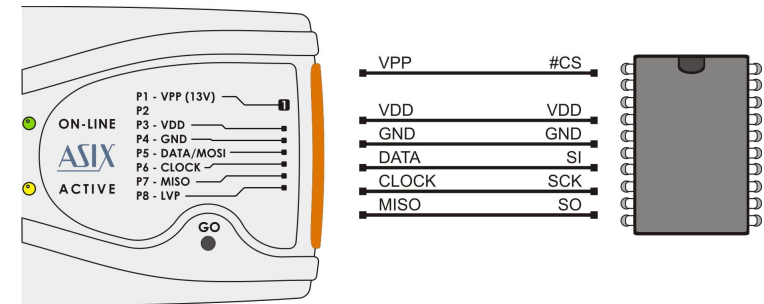


Fig.15: SPI memory chips

- 1)Some devices have WP, HOLD or RESET pins. All of them must be connected to the required logic level in such a way as not to block the communication or device programming.
- 2)Different manufacturers mark the memory chips' SPI pins with different names. Some of them are listed in the following table:

Name on figure	Atmel, SST	ST
DI	SI	D
DO	SO	Q
CLK	SCK	C
#CS	CS, CE	S

- 3)The HPR3V3 adapter should be used for feeding SPI memory chips from PRESTO internal 5 V power supply.

Microwire Memory Chips

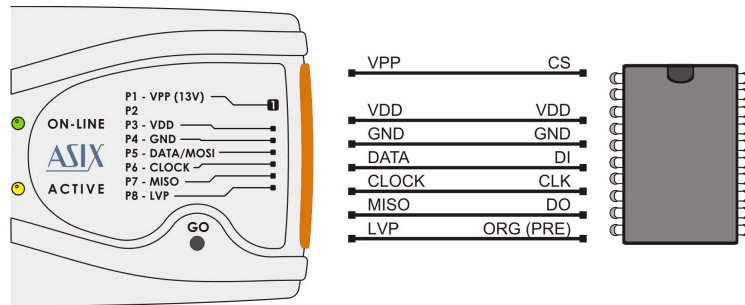


Fig.16: Microwire memory chips

- 1) Pin L determines the memory organization as either 8-bits or 16-bits per word. The user selects the required organization in the UP program and PRESTO then sets this pin to the corresponding logic level. If this memory pin is firmly connected to the correct logic level inside the application, pin L in the programmer remains disconnected.
- 2) If used in combination with the M93Sx6 memory chip, the programmer's L pin must be connected to the device's PRE pin to serve for selecting the protection register.

JTAG Interface

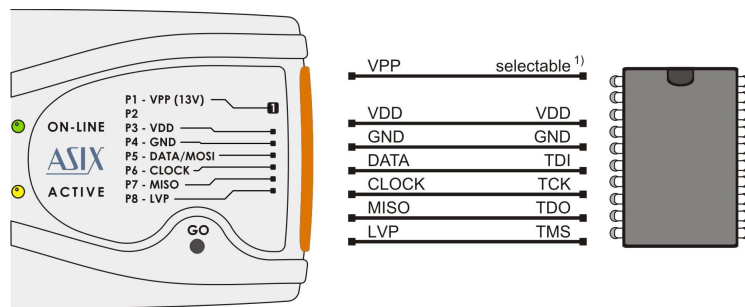


Fig.17: Components with JTAG interface

- 1) Pin P is configurable in the JTAG Player utility. It can be set to keep the device in reset during programming. This is needed for Atmega devices, for example.
- 2) **The programmer always uses an external power-supply voltage for SVF or XSVF file programming by means of the JTAG Player utility.**
- 3) ARM microcontrollers can be programmed and debugged through JTAG interface. The ARMINE program, which can be found on our website, serves ARM microcontrollers programming. For more information on ARM microcontrollers programming see the ARMINE program help.
- 4) PRESTO provides user with support for debugging ARM microcontrollers through OpenOCD which is an open source debugging system originally developed by Dominic Rath. OpenOCD uses GDB for access to debug functions. User can communicate with OpenOCD via a command line and telnet.
- 5) The revision 717 of OpenOCD, which can be found on our website in a program package together with the ARMINE program, is supported officially.
- 6) The HPR1V2 adapter should be used if power supply voltage lower than 2.7 V
- 7) AVR32 microcontrollers are to be programmed from the UP software through the JTAG interface. The device must not be reset during programming.
- 8) ATxmega microcontrollers with the JTAG interface can be programmed from the UP software through this interface. Pin P is not needed for programming. The HPR3V3 adapter should be used for feeding these devices from PRESTO internal 5 V power supply.

2.7 HPR Adapters

2.7.1 HPR3V3

HPR3V3 is an optional accessory to the PRESTO programmer for programming of stand-alone 3.3 V devices as for example DataFlash Memories. The PRESTO programmer can supply a programmed device with 5 V. However, some devices require 3.3 V supply voltage and 3.3 V logic levels on their pins. In such case, the HPR3V3 level shifter or an external 3.3 V power supply have to be used.

Using

The HPR3V3 level shifter can be used very simply. Plug it directly to the pins of the PRESTO programmer (NOT to the programmed device connector!). Pin 2 is used as a key, so that is not possible to connect it wrong way. Now connect the programmed device to HPR3V3 using ICSP cable. Connection of the programmed device pins is same as connection of the device to PRESTO.

Common connection diagram is below.

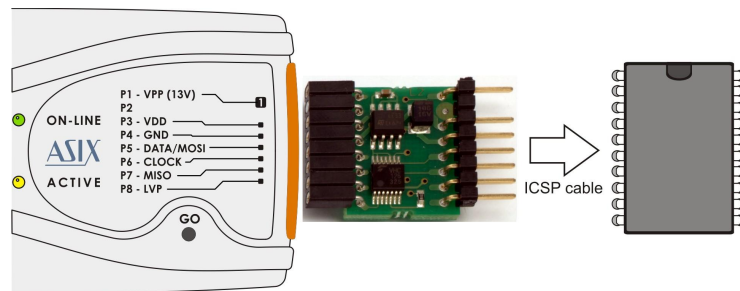


Fig.18: Use of HPR3V3

Set internal power supply for programming.



Important warning

The HPR3V3 pins are unidirectional, so this level shifter can be used for AVR devices, SPI Flash memories or MSP430 devices without SBW interface, but it is not intended for PIC devices and MSP430 devices with SBW interface.

Never connect external voltage to the output 3.3 V supply pins!

2.7.2 HPR1V2

HPR1V2 is an optional accessory to the PRESTO programmer for programming of the devices with supply voltage and logical levels between 1.2 V and 3.3 V as for example Xilinx CoolRunner-II .

The PRESTO programmer can program devices with signal levels between 3 and 5 V \pm 10%, but sometimes it is necessary to program a device with less signal levels. In such case, the HPR1V2 level shifter must be used. The level shifter must be used with external supply voltage from application, it cannot be supplied from the programmer.

Usage

Plug the HPR1V2 level shifter directly to the pins of the PRESTO programmer (NOT to the programmed device connector!). Pin2 is used as a key, so that is not possible to connect it wrong way. Now connect the programmed device to HPR1V2 using ICSP cable. Connection of the programmed device pins is same as connection of the device to the PRESTO. Common connection diagram is below.

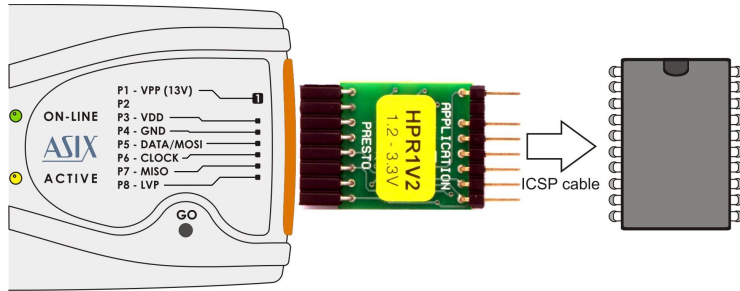


Fig.19: Use of HPR1V2



Important warning

The HPR1V2 pins are unidirectional, this level shifter can be used for example with JTAG devices, but it is not intended for devices what need bidirectional pins like PIC processors.

The HPR1V2 must be supplied with external supply voltage from application.

Never turn on the internal supply voltage from programmer, when the HPR1V2 is connected!

2.7.3 HPRAVR Adapter

HPRAVR is an optional accessory for PRESTO and FORTE programmers for programming AVR microcontrollers in applications with the ISP10PIN standard connector on the device's side and with the ICSPCAB8 cable on the programmer's side. The ISP10PIN connector is typically used on boards with microcontrollers of the AVR type such as STK500, for example.

Use

Connect the HPRAVR adapter to the application's connector. Make sure that pin 1 of the HPRAVR adapter is connected to pin 1 of the ISP10PIN connector in the application (Pin 1 is marked with a red dot at HPRAVR while it may be marked in different ways on the

connected application - see information in the corresponding manual).

Now interconnect the adapter and FORTE with an ICSP cable. Pin 2 in the cable is used as the key. The following picture illustrates a typical interconnection of the PRESTO programmer with an application through the HPRAVR adapter:

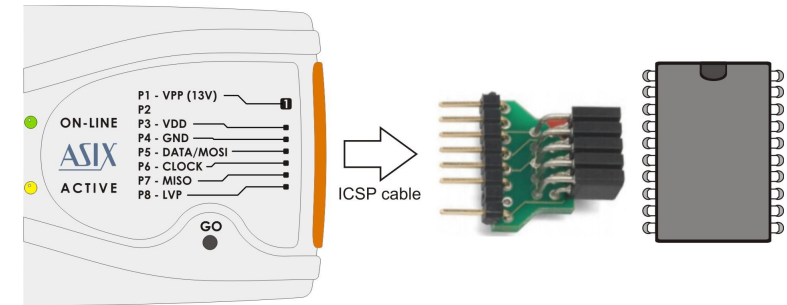


Fig.20: Use of HPRAVR



Important Warning

Pin No. 1 of the HPRAVR adapter is marked with red color. Please double check the position of the pin No. 1 in the application as the application could be damaged if incorrectly connected.

MOSI	1	2	VCC
NC	3	4	GND
RST	5	6	GND
SCK	7	8	GND
MISO	9	10	GND

Fig.21: ISP10PIN, top view

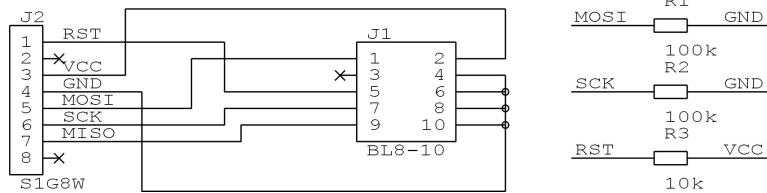


Fig.22: HPRAVR adapter diagram

2.8 Built-in Protection

The PRESTO programmer provides internal overcurrent protection on the VPP and VDD pins and overvoltage protection on the VDD pin.

PRESTO is able to detect overcurrent on the VPP or VDD pin and consequently to disable these pins but only when PRESTO is connected to a PC and the UP program has been launched. If overvoltage on VDD pin is detected a warning message is displayed.

All I/Os have their 27 Ω resistors for better shortage endurance. Inputs, where it is technically possible, are equipped with Zener diodes for better overvoltage endurance.

Any voltage peak higher than 7.5 V or any current higher than 20 mA on any I/O can cause damage of the programmer.



Important warning

PRESTO must be connected to a PC and the UP program must be launched for correct function of internal protection.

2.9 Technical Specifications

2.9.1 Limit Values

Operating temperature	min. 0 °C	max. +55 °C
Storage temperature	min. -40 °C	max. +85 °C
Maximum current on USB	max. 370 mA	
Voltage at any pin ¹	min. -0.5 V	max. 6.5 V
Maximum current on I/O pin	20 mA	
ESD protection (HBM model)	±4 kV contact	
	±8 kV air	

Table 6: Limit values

2.9.2 Operating Specifications



Important Warning

Failure to respect these parameters may damage the programmer or the connected computer.

VDD feeding voltage supplied by programmer	5 V
VDD feeding voltage supplied by application	2.7 V to 5.5 V
Maximum current drawn from VDD	100 mA
Maximum current drawn from VPP	50 mA

Maximum current drawn from I/O pin	4 mA
Allowed input voltage on pins	0 to 5.5 V
P pin output voltage	13 V or logic levels
VIL input voltage	max. 0.5 V
VIH input voltage	min. 2.0 V
VOL output voltage	max. 0.44 V @ VDD=4.5 V typ. 0.1 V
VOH output voltage	min. 3.8 V @ VDD=4.5 V typ. VDD - 0.1 V
Resistance to short circuiting	limited ²
Operating system	Windows ³ 32/ 64-bit, Linux ⁴
USB compatibility	USB 1.1 Full Speed USB 2.0 compatible
USB connector	type B
Dimensions	112 x 64 x 22 mm
Weight	80 g
Gross weight	180 g

Table 7: Operating specifications

¹ Pin VPP configured as an output has a voltage +13 V

² For more information see [Built-in Protection](#)

³ Windows XP, Windows Vista, Windows 7, Windows 8, Windows 8.1

⁴ The UP software runs under Wine

2.9.3 Declaration of Conformity

Declaration of Conformity

We, manufacturer **ASIX s.r.o.**
Staropramenna 397/4, 150 00 Prague, Czech Republic

declare under our sole responsibility that

the product: **Component programmer**
type: **PRESTO**
using: Silicon Device In-Circuit USB Programmer

manufactured by our company is in conformity with the following standards

EN 55022 Radio disturbance characteristics - Information technology equipment

EN55022, class B Radiated Emission

EN 55024 Immunity characteristics - Information technology equipment

EN61000-4-2, class B Electrostatic Discharge

EN61000-4-3, class A Radiated Susceptibility

EN61000-4-8, class A Power Magnetic Field

following the provisions of Directive

2004/108/ES

Certificate no.: 1140044

Complementary information:

Test report no.: 302137-01/01

Issued by: Elektrotechnický zkusební ústav, s.p.
Pod Lisem 129, 171 02 Prague 8, Czech Republic.

The last two digits of the year in which the CE marking was affixed: 14

Place of issue: Prague
Date of issue: 2014-01-22
Manufacturer representative: RNDr. Bedrich POLA
Position: Managing Director

PRESTO complies with the RoHS directive.



3

DRIVERS

This chapter deals with driver installation and updates.

3.1 Driver Installation

3.1.1 Windows Operating Systems

The user must have administrator rights to install and run the UP program for the first time. Standard user rights are sufficient for further use.

PRESTO drivers are installed automatically as part of the UP program installation.

Windows 7 and later

Start with installing the UP program. Its installer installs the USB driver for PRESTO, too. You can find the installer on the supplied CD-ROM or on the web (the preferred option).

Once the installation is complete, connect the PRESTO programmer to your computer. The green ON-LINE LED should turn on after a few moments and the Windows Device Manager should present the programmer as correctly installed.

Older supported Windows versions

The driver contained in the UP installer is intended for Windows 7 and later. For older Windows operating system versions the driver has to be downloaded from www.asix.net, from download section of the programmer and unpacked somewhere. After the programmer has been connected, the operating system asks for the driver. In "Found New Hardware" dialog the path to the unpacked driver has to be set.

During the installation, the operating system will ask whether it should install the software, which has not passed the Microsoft compatibility test for Windows. Click **Continue Anyway**.



Fig.23: Compatibility test dialog window

The green ON-LINE LED should turn on after a few moments and the Windows Device Manager should present the programmer as correctly installed.

3.1.2 Linux

The programmer can be operated under Wine in Linux. Please find a detailed manual at http://www.asix.net/supp_linux.htm

3.2 Driver Updating

PRESTO communicates with the PC through a USB circuit produced by FTDI www.ftdichip.com, which also develops drivers for these circuits.

The latest drivers are always included in the UP installation pack.

Drivers for the Windows operating system have been stable for a long time and therefore no further updates are usually needed, unless additional applications using the FTDI circuits on the given PC so require.

However, should you need to update your driver, the simplest way of doing so is to update the UP program.

Download the latest UP installer from the web and install the new version without risk of losing your personalized program setup data or data of your projects. The new version will replace the original one.

4

UP SOFTWARE

UP is a name for control software designed for programmers made by ASIX. The program offers many advanced functions and enables an operator to control the programming process either from the software interface or remotely from the command line utilizing Windows messages and the DLL library. The program runs under Windows or Linux (in Wine).

4.1 Abbreviations Used

Menu → item bold italics followed by the arrow sign → make references to particular items in menus, names of tabs (cards) in a particular window.

4.2 Installation

Installation is very easy. The installation program can either be found on the CD-ROM supplied together with the programmer or downloaded from www.asix.net. Run the installer (UP_xxx_EN.EXE, where xxx represents the version number). There is no need to close other running applications. The installation process takes only a few seconds and requires you to press the Enter key a few times. No modifications to the operating system take place during installation, i.e. no computer restart is needed and the program can be used immediately after completion (by clicking its icon, for example). After the first start, the program asks which language it should use (English or Czech), which programmer to work with (e.g. FORTE) and which port the programmer is connected to.

If needed, the program can be uninstalled using the Add/Remove Programs icon in the Control Panel or manually

by deleting the corresponding directory and desktop shortcut(s).

A previous program version (if it exists) does not have to be removed before installing a newer version. Use of the latest available version is recommended.

4.3 Device Programming

The following sections describe the ways of programming devices and things to pay special attention to.

4.3.1 Programmer Selection

Before a device can be programmed, the programmer which will be used needs to be selected. Currently either FORTE or PRESTO can be chosen.

Select the programmer by going to **Options → Select programmer** or by double-clicking the programmer name displayed in the top right corner of the program window. The following dialog window opens:

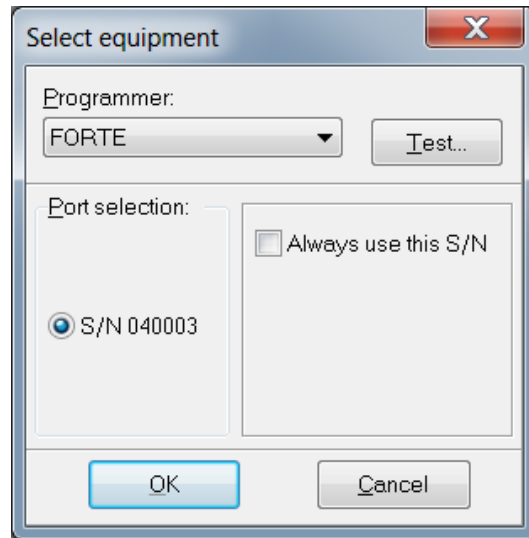


Fig.24: Programmer selection

If the programmer is connected to a computer and no other program communicates with it, its serial number gets displayed. You can test communication with the selected programmer by pressing the **Test...** button.

If the **Always use this S/N** choice is set, the currently selected programmer is used even when in a loaded project file there is defined a different programmer serial number. Serial number defined on the CommandLine has priority before this choice.

4.3.2 Projects

It is recommended to use projects for device programming in UP.

Projects save all settings directly associated with particular device programming such as device type, required voltage, verification method, name of file containing the programming data and many other important pieces of information.

A new project can be created by choosing **File → New project.**

This is followed by selecting a device type, a file with programming data, settings of the device's configuration word, applied voltage and other important parameters.

configuration word, applied voltage and other important parameters.

Once all required selections are made, save the project by choosing **File → Save project...**

An existing project can be opened by choosing **File → Open project....**

4.3.3 Device Type Selection

Select the device type by choosing **Device → Select device** or by double-clicking the device name displayed in the top right corner of the program window.

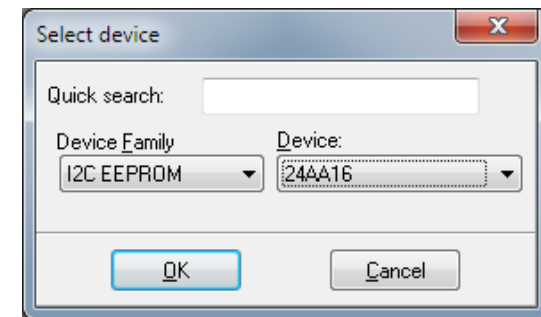


Fig.25: Device selection

A filter is available for sorting devices by families and another one for Quick search. Just start typing an important part of the device's name in its field. This radically reduces the list of devices and speeds up the whole selection process.

The Quick search filter allows use of the question mark as a wild-card for a part of the name, for example **PIC18?20.**

4.3.4 Program settings

It is advisable to fine-tune the program behavior by adjusting the settings to suit your particular needs. This can be done by choosing **Options → Program settings**.

There is a great number of possible settings. If you are not sure that all the settings are correct, use the **Load defaults** button, which returns all the setting to the original (default) state.

If you are updating UP to a new version, all the existing settings will be preserved.

A detailed description of all settings can be found in [Menus](#), so we will pay attention to only a few important settings for now.

Delay for VDD switching on/off when supplied from programmer

If you supply power to your application from the programmer during programming and UP announces overcurrent on VDD pin due to charging capacitors in the application, it may be advisable to enlarge the switch on time in **Program settings... → Programming → Delay for VDD switching on/off when supplied from programmer**. This might be necessary to give the programmer enough time to charge the large capacitors in the application.

At the same place it is possible to set the discharge time, when the program announces, that the VDD was not fully discharged.

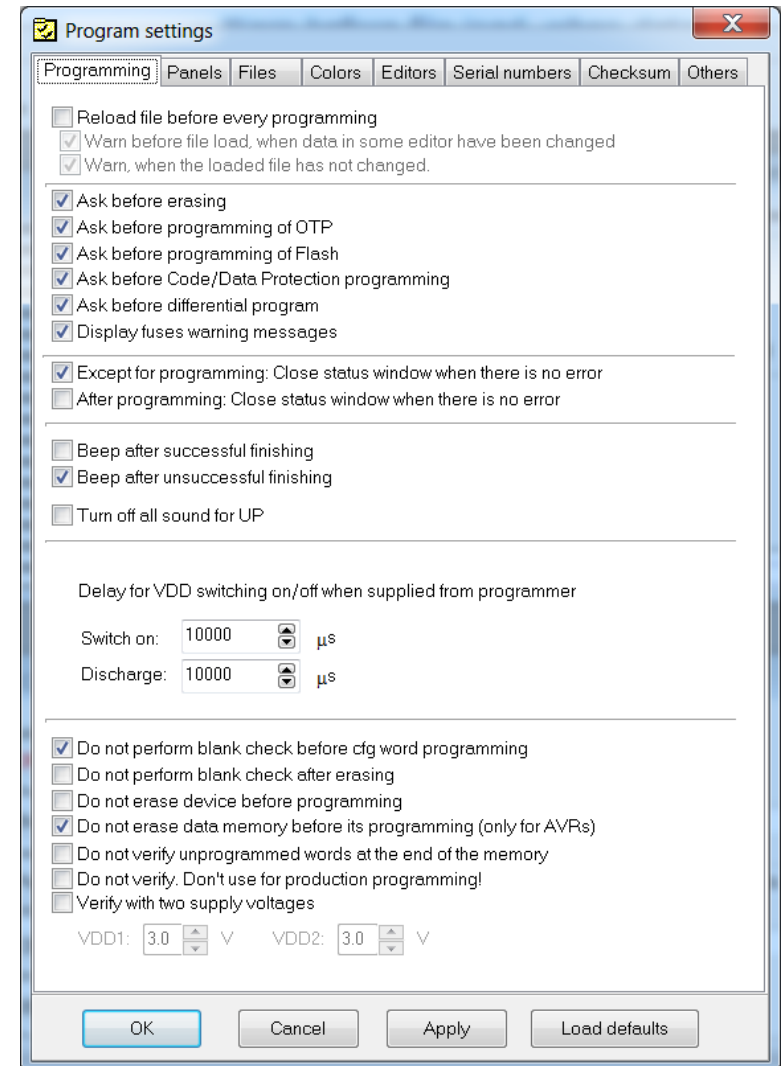


Fig.26: Programming settings

Production Programming Settings

If you want to perfectly verify your production to make sure that the device is correctly programmed, you can use the **Program settings → Programming → Verify with two supply voltages** option and to apply the lowest and the highest voltage allowed for the device as the limits. Some manufacturers recommend this option for the production programming. However, it is only available if the application is supplied with power from FORTE.

Program settings → Panels → Show mass production counter in status bar could be a useful tool visibly monitoring numbers of successfully and unsuccessfully programmed devices. The counter can be reset in **Device → Program → Mass production → Counter reset**.

Program settings → Serial numbers → Log to file can be used as another convenient assistant. With this option selected, information on the programming progress of individual devices gets recorded (logged) in a selected file.

If you wish to automatically include the serial number during production programming, you have a great range of possibilities concerning what the number should look like and where it should be positioned in the memory. All serial number settings can be found on the **Serial numbers** tab.

For further information on serial numbers see [Serial Numbers](#).

Settings for Programming During Development

If you are frequently changing the content of the programming data such as during application development, for example, you can simplify your work by using the **GO** button, which typically serves for

programming and verification of the whole memory content. The function of this button is programmable and can be set up under the **Options → Key shortcuts** menu in the **GO button** section.

The use of the GO button for programming should be accompanied by **Options → Program settings → Programming → Reload file before every programming** option.

Options → Program settings → Programming → Warn before file load, when data in some editor have been changed causes that a warning appears if data have been changed in any editors and automatic file reloading option is set.

Options → Program settings → Programming → Warn, when the loaded file has not changed causes that a warning appears if the file loaded before programming has not changed.

The following option can also be useful: **Program settings → Programming → After programming: Close status window if there is no error**.

There are special cases when developers do not have the device's voltage supply pin available in an application powered by an external source. In order to feed the programmer's output circuits, power supply from the programmer must be switched on in such a case and its voltage set at the same value as used in the application. Yet as some voltage still “sneaks” into the programmer from the application through the programming pins, the programmer “sees” that there is some voltage present and refuses to activate its own output voltage. For such a case the following option is available: **Program settings → Others → Allow internal and external supply voltages collision**.

WARNING: Activating this option in other situations could damage the programmer!

Programmer Settings

Each time a particular programmer is selected (FORTE or PRESTO), the programmer settings window is displayed allowing the user to set the voltage used and some other important programming options.

If you are using an external power source for feeding the application, the **During programming** option must not be checked.

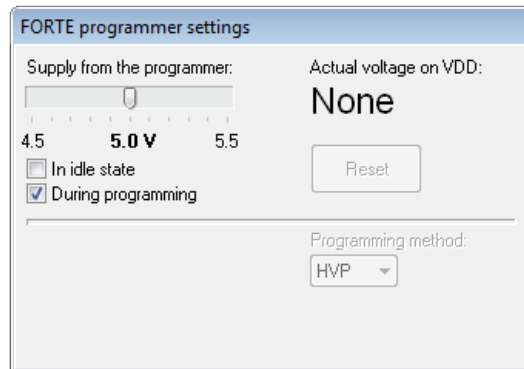


Fig.27: Programmer settings

The current voltage is continuously displayed in the top right corner of this window.

Should an error i.e. overload occur, a warning appears at this place.

The output voltage in the idle state if it is turn on can be changed only if it is allowed under **Options → Program settings → Others → Allow to change supply voltage level when it is on** (FORTE only).

If a voltage is present at the VDD pin, you can stop the running microcontroller application by pressing the **Reset** button and restart it by pressing the same button again.

Fuses and Working with Them

Characteristics of the device (fuse) to be programmed can be set in the **Configuration** window. Changes in fuses can be saved by choosing **File → Save** or **File → Save project....**

If the given .hex file of device includes definitions of its fuses, fuses are saved in it.

Fuses are saved together with a project in the case of Atmel microcontrollers and memory chips. If you are working with these, right-click the **Configuration** window once you have set the fuses and use the **Learn fuses** option.

If the **Options → Program settings → Programming → Reload file before every programming** option is active, the software reloads current file after the **Program** button is pressed. If, however, fuses are not saved in current file and no project is created from which fuses could be used, the configuration memory initializes into the default state before each programming procedure. This can be avoided by deactivating the **Program settings → Files → Erase configuration memory before file reading** option.

Many devices have specific requirements for fuse settings. Further information on how to correctly set their fuses can be found in the particular device data sheet.


4.3.5 Programming

Select the file that you want to program by choosing **File → Open....**

Once the file opens, you can see the current code/main memory, data memory and configuration memory (fuses). If you cannot see these windows, activate them under the **View** menu.

The memory being programmed can be manually modified at any time by simply marking the required location and rewriting its value from the keyboard. If you

want to save such a modification, choose **File → Save**, **File → Save as...** or **File → Export data memory to file....**

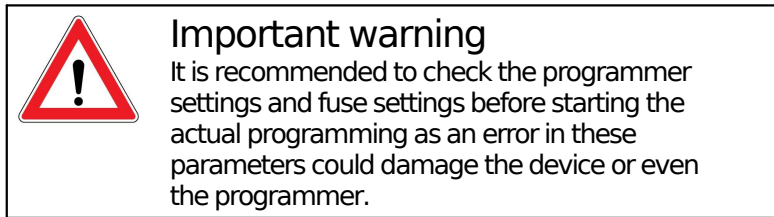

The programming process is triggered by choosing **Device → Program** or by clicking the **Program** button.

In some devices, the system checks the Device ID (device electronic signature) and the code/data protection bits before launching the programming process. If the ID does not match the selected device type, a warning message is displayed.

Displaying of this warning message is frequently caused by a fault in the interconnection of the device and the programmer.

If things are in order, the programmer performs the following operations: erases the device, checks the erasure, programs the device and checks the programmed device.

If only a particular memory of a microcontroller needs to be programmed, it can be done by choosing the corresponding item in the **Device → Program** menu or by clicking the pull-down arrow next to the **Program** button on the button bar. Depending on the device type, the following options may be available: program code/main memory, program data (EEPROM) memory, program configuration memory or program all.

Differential Programming

The **Device → Program** menu offers a possibility of differential programming, provided the device to be programmed supports it. If selected, the existing memory content is read first and only cells that differ are then

programmed.

Differential programming is useful for development during which content of the programming data changes very often, but the changes are tiny. As only changed cells are overwritten, the differential programming is advisable for devices with a low number of writing cycles. It can also be faster than the conventional re-writing of the whole memory content.

4.4 Further Features

The following section focuses on selected additional functions of UP available for device programming.

4.4.1 Setting the GO Button

ASIX programmers feature a GO button, which allows the user to trigger the programming process without a computer mouse or keyboard.

The function of the GO button can be set under the **Options → Key shortcuts** menu in the **GO button** field to suit user's needs.

The UP software must be running if the user wants to use the GO button, but may be minimized on the screen.

Additional settings associated with the GO button can be found in [Settings for Programming During Development](#).

4.4.2 Mass Production

The mass production function is available under the **Device → Program → Mass production** menu. It can also be called up by clicking the arrow next to the **Program** button on the toolbar.

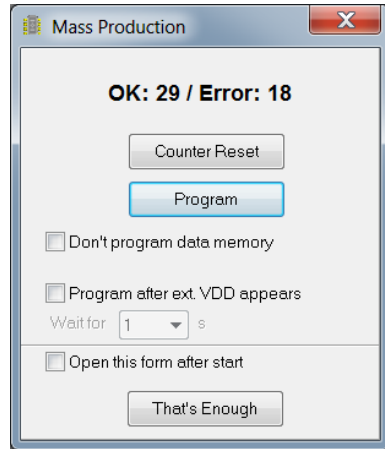


Fig.28: Mass production

The actual programming can be triggered by clicking the **Program** button in the **Mass production** dialog window.

The function of this button is identical to the **Program all** or **Program all except data memory** options depending on the state of the **Don't program data EEPROM** checkbox in the **Mass production** window.

This dialog window also displays a counter of devices programmed. Depending on the program settings, the counter can also be displayed in the status bar. For further information on settings see [Production Programming Settings](#).

The counter displays the number of programmed devices in both the mass production mode and the standard mode.

Pressing the **Counter reset** button zeroes all the mass production counters. This operation cannot be undone.

The programming can be launched by connecting external power supply (VDD).

When the "Open this form after start" setting is enabled, the form opens after program start or after project file open, if it is used.

4.4.3 Serial Numbers

The Serial Numbers function programs the serial number or another sequence of characters in the selected memory location.

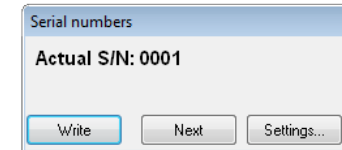


Fig.29: Serial numbers

Once the serial numbers are activated and their type set up under **Options** → **Program settings** → **Serial numbers**, a window with the current serial number opens offering the possibility to manually write a serial number in the memory HEX editor, to specify where it should be written and if the system should proceed to the next sequential number.

Serial numbers can be:

- **Computed**

The computed serial numbers must always be written in the same selected position in the device such as the code/main memory, data memory or an ID position, for example. The serial number is always expected to be a number in decimal or hexadecimal format and may be coded as a 4-bit combination (one to four characters per word) or as an ASCII character (one or two ASCII characters per word). If the code/main memory is used for Microchip microcontrollers, you can choose RETLW instructions. Then RETLW instructions are written in the given address of the code/main memory together with a parameter corresponding with the serial number.

- **Taken from File**

A single serial number can be distributed in more than one device memories (the serial number itself directly to the program, the equipment address to the data memory, and the serial number again to ID positions in order to be

able to read it from a locked device, for example).

Note: A word is understood as one memory position.

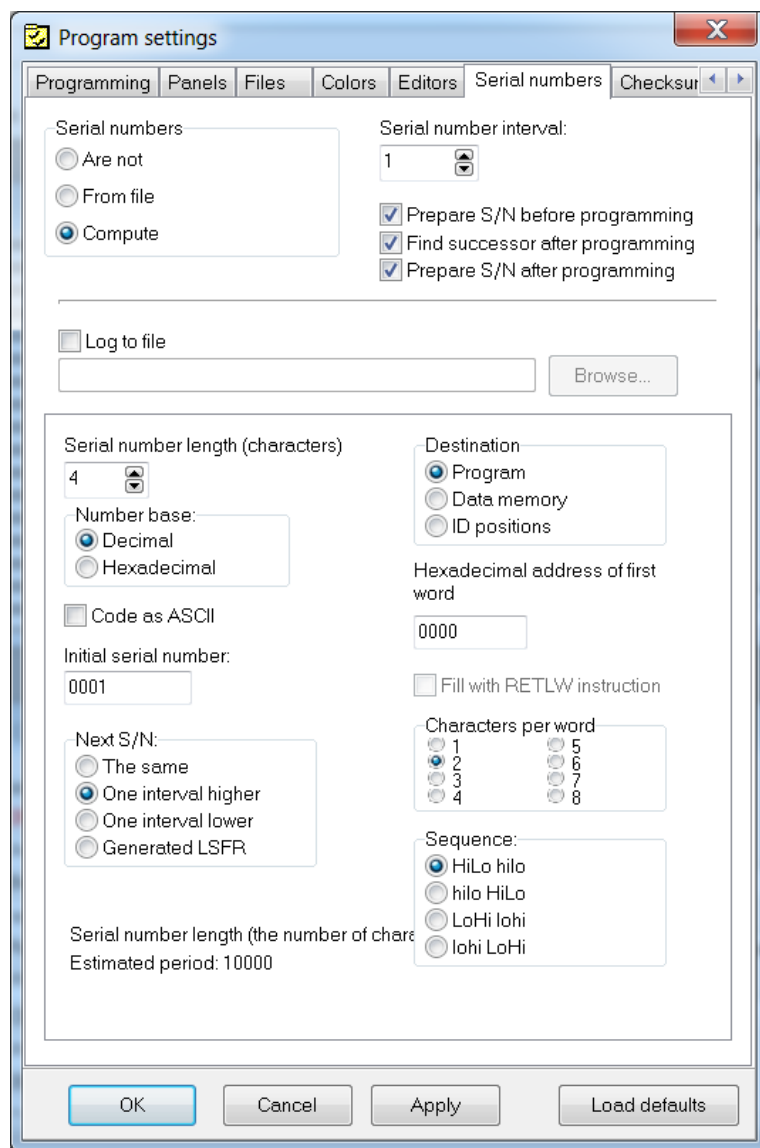


Fig.30: Serial number settings

A file for logging the programmed serial numbers can be selected under **Options → Program settings → Serial numbers**.

The numbers themselves are logged in case of calculated serial numbers while their labels are logged in case of serial numbers taken from a file - see [Format of Files with Serial Numbers](#).

Except for the serial numbers also the date, time and the result of the programming are written to the file. For the devices for which the revision reading is supported, the revision number is also written to the file.

Format of Files with Serial Numbers

Files containing definitions of serial numbers are text files that can easily be created in third-party programs. *.SN or *.TXT are recommended file extensions.

A serial number record has the following form:

```
[comment] label: data record, data record, ..., data record;
```

Semicolons are obligatory at the end of records.

- **Comment** is any string containing no colon ':'. Comments are optional. If a colon cannot be found in the whole serial number record, the record is ignored (understood as a comment).

```
This is just a comment;
```

- **White character** is a space, tabulator or end of line (CR+LF).
- **Label** is a string identifying the serial number. This string is compulsory. The label must not contain white characters, colons or semicolons.

Data Record

A data record consists of an address and data items in a chain following this address.

Each item can be written in hexadecimal form (e.g. 2100) or a numeral base in which the number is written in can be explicitly defined.

For example, b'10101010' means the same as h'AA', d'170' or just AA. 'A' means d'65' (ASCII character itself).

Example record for PIC16F628A:

2100 05 55 54 means to save data 05h, 55h, 54h in addresses 00 to 02 of a data memory.

The code/main memory which stores the serial number can also be specified by the word "CODE." or "PROG." or just "P.".

The data memory should be specified by the word "DATA." or "EE." or just "E.".

"ID" or just "I" is used for the memory of ID positions.

These words are always followed by an address inside the specified memory.

Example:

EE.00 05 55 54 means to save data 05h, 55h, 54h in addresses 00 to 02 of a data memory.

Notes

- * There is no specifier for the configuration memory, it would make no sense.

dsPIC – addresses of 24-bit words are to be written in for all addresses (i.e. an internal dsPIC address of 24h is 12h here). For a data (EEPROM) memory addresses of 16-bit words are to be written in, i.e. as they go one by one through the microcontroller.

- Autonomous memory chips (I²C, SPI) have only the code memory. If a non-existent memory is specified, an error is reported.

Example of File with Serial Numbers

Comment at the beginning;

```
sn1: 0000 34 45 56 67,
      2100 01 02 03 04; serial number 1
sn2: 0000 45 56 67 78, 2100 02 02 03 04;
sn3: 0000 56 67 78 89, 2100 03 02 03 04;
note
```

```
sn4: 0000 67 78 89 9A, 2100 04 02 03 04;
sn5: 0000 78 89 9A AB, 2100 05 02 03 04;
sn6: 0000 78 89 9A AB, 2100 06 02 03 04;
sn7: 0000 78 89 9A AB, 2100 07 02 03 04;
sn8: code.0001 3F00 3F01 3F02 3F03,
data.0002 'x' '4' '2';
sn9: prog.0001 3F00 3F01 3F02 3F03,
      e.0002 'x' '4' '3';
```

4.4.4 Calibration Memory Support

Some devices contain a calibration memory containing factory-preset device calibration. The loss of its content can cause a fault in the device functionality. For this reason we have tools allowing users to work with the calibration memory.

Working with Calibration Memory When Erasing a Device in UV Eraser

Calibration data should be saved prior to erasing a device. To do so, choose **File** → **Save calibration data...**

ou can retrieve it back by choosing **File** → **Read calibration data...**

The program contains a function for verifying whether a device has been erased correctly: **Device → Blank check**. When this command is used, the program displays data from the calibration memory.

Working With Calibration Memory in Devices With Flash Memory

When these devices are erased, the content of their calibration memory is preserved.

If you really need to erase the calibration memory for some reason, you can do so by choosing **Device → Erase → Erase all (including calibration)**.

Advice

New Flash devices with a calibration memory (such as PIC12F629) contain so called 'bandgap bits', which form part of the device calibration. These bits can be found in the configuration word and are erased too if the command **Device → Erase → Erase all(including calibration)** is executed!

4.5 Program Controls

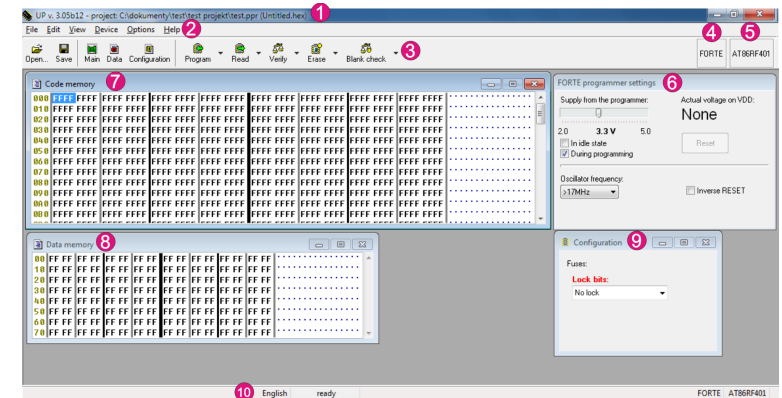


Fig.31: Controls of UP software

- 1)Title bar with the open project name or file
- 2)Menu
- 3)Toolbar
- 4)Currently selected programmer
- 5)Currently selected device
- 6)Programmer settings window
- 7)HEX editor window for code/main memory
- 8)HEX editor window for data memory
- 9)Configuration window
- 10)Status bar

4.5.1 Toolbar

A toolbar is a panel with quick selection buttons located under the program menu (see [Program Controls](#)).

If you want to remove the toolbar, simply uncheck the Display icons and descriptions on the toolbar button options in the Settings menu as described in [Program](#)

[settings](#).

4.5.2 Status Bar

The status bar is a panel in the bottom part of the window (see [Program Controls](#)). It presents information on the programmer, the device, changes to the file since the last saving, etc.

Individual parts of the status bar react to double-clicking and to the context menu that opens after right-clicking.

If you want to hide or re-display the status bar, choose **Program settings → Panels → Display the status bar in the lower part of the window**.

4.5.3 Menus

The following texts describe in detail individual items in the UP software menus.

Menu commands can be triggered with mouse by clicking on a particular menu item or from the keyboard by pressing the key together with the shortcut, i.e. the underlined letter in the menu.

The menu bar consists of the following menus (categories):

- [File Menu](#)
- [Edit Menu](#)
- [View Menu](#)
- [Device Menu](#)
- [Options Menu](#)
- [Help Menu](#)

File Menu

File → New

Keyboard shortcut: Ctrl+N

The program creates a new empty file. If the currently open file has not been saved, the program prompts the user to save it.

File → Open...

Keyboard shortcut: Ctrl+O

The program opens the Windows standard dialog listing the files saved on the disc. The supported file formats are described in [Appendix C: Intel-HEX File Format](#). Files with extensions .hex or .a43 are loaded as Intel-HEX, others as binary. There are also filters available making it possible to open all files as .hex or as .bin.

File → Open next file...

The program imports another .hex or .bin file with an optional offset. This function is useful if the user needs to load another file into device's memory. Files with extensions .hex or .a43 are loaded as Intel-HEX, others as .bin.

For example, this command provides for merging of several .hex files (e.g. bootloader + program).

File → Reload actual file

Keyboard shortcut: Ctrl+R

The program re-opens (i.e. re-reads from the disc) the currently open file. This command is useful if you know that the file on the disc has changed and you want to load these changes into the program.

If you are using **Program settings → Files → Do automatic check for newer versions of actual file**, the program automatically notifies the user of a change in the currently open file and offers its reloading.

File → Save

Keyboard shortcut: Ctrl+S

The program saves the file on a disc. If you want save your file under a different name than the current one, use the **Save As...** command instead.

The program can skip unused locations of the memory. See [Program settings](#) for details.

File → Save as...

The program saves the open file on a disc under a new name using the Windows standard dialog.

The program can skip unused locations of the memory while saving or not to save certain selected locations. See [Program settings](#) for details.

File → Import data memory from file...

Using the Windows standard dialog, the program reads and imports the content of a data (EEPROM) memory saved in a different file. This allows the user to load a data memory if this has not been saved in the same file as the code/main memory (this concerns ATmega8 microcontrollers, for example).

Important warning

Such a file, regardless of its content, is read from the zero address as if it contained only the data (EEPROM) memory. This means that a file generated normally by a compiler cannot be correctly read using this command.

File → Open file with data memory automatically

With this option selected, the program automatically loads the file for the data memory alongside with loading the file for the code/main memory. This option is active only if a separate file is loaded for the data memory.

File → New project

Keyboard shortcut: Shift+Ctrl+N

This command creates a new project.

It is especially advisable to use project files if you frequently switch between programming different device types or if you are using several different programmers. A project file contains all the corresponding settings and provides for loading of all of them in one step.

File → Open project...

Keyboard shortcut: Shift+Ctrl+O

Using the Windows standard dialog, the program opens an already existing project file saved on a disc. If an additional file had been opened together with the project, such a file opens as well.

File → Save project...

Keyboard shortcut: Shift+Ctrl+S

Using the Windows standard dialog, the program saves the current project under a new name. Saving of the project under the same name is done automatically as well as saving the program settings, for example.

File → Close project

Keyboard shortcut: Shift+Ctrl+W

The program terminates the work with the currently open project, saves the project file on the disc and returns to the state in which it was before the new project was opened.

File → Recent projects

This function remembers the last 10 opened projects. Clicking the name of one of them opens the project.

File → Read calibration data...

Using the Windows standard dialog, the program opens a file with the calibration data and loads the data in the memory.

File → Save calibration data...

Using the Windows standard dialog, the program creates a file with the device's calibration data previously read from the device connected to the programmer. This calibration data can be reloaded using **Read calibration data** if the device gets erased in the meantime.

For further information on the program's support of work with the calibration memory see [Calibration Memory Support](#).

File → Export to bin...

This command saves binary data from the code/main memory, from the data memory or from ID positions in a selected file.

16 or 8 bits word width can be selected for the data to be saved.

File → Exit

Standard Windows keyboard shortcut: Alt+F4

Keyboard shortcut: Alt+X



Warning

If closing of the program is forced by the Turn Computer Off command and the program does not receive the user's confirmation, the system closes it forcibly after some time without saving the open file or settings.

If the program is currently working with the hardware, it refuses all system's requests to turn off and can be seen as "not responding" by the system.

This command closes the program. If the open file has changed, the program prompts the user to save the

changes.

Edit Menu

Edit → Fill with value...

The program fills a memory location with a specified value. This command is used especially for erasing (filling with ones) or zeroing (filling with zeros) a particular location. Yet it can be filled with any value or with random data.

When the **Fill with value...** command is called, the program presets the selected memory according to the active window. If a memory location was highlighted before calling this command, the program presets the marked location for filling in.

A memory location can be selected by holding the Shift key and clicking by mouse or moving by means of the cursor keys (arrows). For further information on highlighting a location see [HEX Editor Windows](#).

Edit → Text insert...

This command saves a text in ASCII or in hexadecimal format into a selected memory location. Ends of lines can be coded as NULL, CR, LF or CR+LF characters.

Individual bytes can be inserted as well as saved in RETLW instructions (this applies only to the code/main memory working with Microchip microcontrollers). Note: Microchip PIC RETLW instruction means return with a constant value in the work register - this instruction is frequently used for creating tables.

If the **Text insert...** command is called, the program presets the selected memory and the starting cell according to the current window and the selected cell.

Edit → Fill selected location with RETLW

This command fills the selected Microchip microcontroller's memory location with RETLW.

The command can be called only from an open HEX editor. It is also available through the context menu (right mouse click) in the editor.

A memory location can be selected by holding the Shift key and clicking by mouse or moving by means of the cursor keys (arrows). For further information on highlighting a location see [HEX Editor Windows](#).

View Menu

View → Code/main memory

This command opens or closes the code/main memory HEX editor window. For more on HEX editors see [HEX Editor Windows](#).

View → Data memory

This command opens or closes the data memory HEX editor window. For more on HEX editors see [HEX Editor Windows](#).

View → Boot memory

This command opens or closes the boot memory HEX editor window. For more on HEX editors see [HEX Editor Windows](#).

View → Configuration memory

This command opens or closes the configuration memory HEX editor window. For more on HEX editors see [HEX Editor Windows](#).

View → Console

This command opens or closes the console, where the UP can write details about programming.

View → Display code/main memory

Keyboard shortcut: Alt+F10

This command displays the code/main memory HEX editor. If it is already displayed, it moves it to the front (the editor gets focus). For more on HEX editors see [HEX Editor Windows](#).

View → Display data memory

Keyboard shortcut: Alt+F11

This command displays the data memory HEX editor. If it is already displayed, it moves it to the front (the editor gets focus). For more on HEX editors see [HEX Editor Windows](#).

View → Display configuration memory

Keyboard shortcut: Alt+F12

This command displays the configuration memory HEX editor. If it is already displayed, it moves it to the front (the editor gets focus). For more on HEX editors see [HEX Editor Windows](#).

View → Display programmer form

Keyboard shortcut: Ctrl+P

The programmer form is always visible. This function moves the programmer form to the front (the editor gets focus).

Device Menu

Device → Program

Keyboard shortcut: Shift+F5

This command opens a sub-menu with programming options. Some items may be inaccessible for certain device types.

► Program all

Keyboard shortcut: F5

This command erases the device, checks the erasure, programs it and verifies the programming result in the whole device. The Device ID check and the Code/Data Protection check are performed prior to this operation. The behavior of this command is influenced by the program settings - see [Program settings](#).

► Program all except data memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**.

This command works the same as **Program all** with the exception that it does NOT erase, program or verify the data memory.

Devices without a data memory do not have this command available and their programming is done using the **Program all** command.

This command cannot be used in some cases that use Code or Data Protection. For these, the program offers the command **Erase whole device and program also data memory** (with data currently in the editor).

► Program code/main memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**.

This command erases the code/main memory, checks the erasure, programs and checks the programming result.

► Program data memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command erases the data memory, checks the erasure, programs and checks the programming result.

► Program configuration memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command programs the configuration memory and ID positions (if device contains them) and checks the programming result

► Program differentially

Keyboard shortcut: Ctrl+F5

This command programs the device applying the differential method. This means that it reads the device and programs only those cells the content of which differs from the editor.

This command is available only for those devices that support such treatment (not all devices do).

If a device has the Code/Data Protection active, differential programming makes no sense. The program performs complete programming instead, including device erasure.

► Differential program data memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command programs the data memory applying the differential method. Its function is identical with differential programming of the code/main memory.

This command is available only for those devices that support such treatment (not all devices do).

If a device has the Code/Data Protection active, differential programming makes no sense. The program

performs complete programming instead, including device erasure.

Differential programming of a data memory should be used for AVR microcontrollers if the user needs to reprogram the data memory only without previously erasing the device.

► Mass Production

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command opens a window for easy programming of several identical devices with the same or very similar program(s) (except their serial numbers and the like). For further information see [Mass Production](#).

Device → Read

Keyboard shortcut: Shift+F6

This command opens a sub-menu with device reading options. Some of them may be not available for certain device types.

► Read all

Keyboard shortcut: F6

This command reads the content of the whole device.

► Read all except data memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command reads the content of the whole device except the data memory.

► Read code/main memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command reads the content of the code/main memory.

► Read data memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command reads the data (EEPROM) memory.

► Read configuration memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command reads the configuration memory and ID positions (if device contains them).

Device → Verify

Keyboard shortcut: Shift+F7

This command opens a sub-menu with device memory content verification options. Some of them may be not available for certain device types

► Verify all

Keyboard shortcut: F7

This command compares the content of all device memories with the current content of HEX editors.

► Verify all except data memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command compares the content of all device memories except its data memory with the current content of HEX editors.

► Verify code/main memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command compares the content of the code/main memory with the current content of code/main memory's HEX editor.

► Verify data memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command compares the content of the data memory with the current content of data memory's HEX editor.

► Verify configuration memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command compares the content of device's configuration memory and ID positions (if device contains them) with settings in the Configuration window.

Device → Erase

Keyboard shortcut: Shift+F8

This command opens a sub-menu with device memory erasing options.

Erase verification (blank check) is automatically performed after each erasing. This verification can be skipped by choosing **Options → Program settings → Programming → Do not perform blank check after erasing**. This can save time with some devices.

► Erase all

Keyboard shortcut: F8

This command erases the whole device.

► Erase code/main memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command erases the code/main memory. It cannot be used if Code/Data Protection is active.

► Erase data memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command erases the data memory and verifies it. It cannot be used if Code/Data Protection is active.

Device → Blank check

Keyboard shortcut: Shift+F9

This command opens a sub-menu with device erasure verification options. Some of them may be not available for certain device types.

► Blank check all

Keyboard shortcut: F9

This command verifies whether the device is correctly and completely erased.

► Blank check all except data memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command verifies whether the device except the data memory has been correctly erased.

► Blank check of code/main memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command verifies whether the code/main memory is correctly erased.

► Blank check of data memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command verifies whether the data memory is correctly erased.

► Blank check of configuration memory

A keyboard shortcut can be assigned in **Options → Key shortcuts**

This command verifies whether the configuration memory and ID positions (if device contains them) are correctly erased.

Device → Select device

Keyboard shortcut: F4

This dialog allows you to select a device type to be programmed. Some memory types need to have their data organization selected after the device type selection.

Only devices supported by the currently selected programmer are displayed in the dialog window. If you want to select a device not supported by the current programmer, select a different programmer type first.

For further information on selecting a device see [Device Type Selection](#).

Options Menu

Keyboard shortcut: Shift+F10

The **Options** menu holds all the possible settings of the UP program. There is a great number of setting parameters. If you are not sure that all settings are correct, you may use the **Load defaults** button, which returns all the settings to the initial (factory) state.

Advice

Program settings → Load defaults button renews the state of all settings on all tabs, i.e. even the color settings, for example.

Options → Program settings → Programming

Keyboard shortcut: Shift+F10

This tab provides for setting all the general programming parameters.

Settings concerning the programmer and the communication port are described in [Programmer Selection](#).

A special [Device → Select device](#) window is available for setting the device type.

► Reload file before every programming

The program reads the current file with programming data from the disc before each and every request to program a device if this option is checked.

If the use of serial numbers is also activated requesting reading the current file prior to programming, then the file is read first and only then is the current serial number written.

► Warn before file load, when data in some editor have been changed

When before load of the file before programming it is found that data in some editor have been changed, the program shows a warning.

► Warn, when the loaded file has not changed

Program shows a warning, when the content of the loaded file has not changed from the previous programming.

► Ask before erasing

With this option checked, the program asks for user confirmation before erasing a device.

► Ask before programming of OTP / Flash / Code/Data Protection / differential

A set of options determining which user confirmation dialogs will or will not be displayed by the program.

The program asks just once except the **Code/Data Protection programming**. If the program needs to ask the user for additional information before actual programming (such as **Device has Code or Data Protection. Do you want to erase it entirely?**), it does not ask for further programming confirmation after answering the first dialog.

► Display fuse warning messages

The user can choose if warning messages should be displayed for some fuses. It is recommended to leave this option on.

► Except for programming: Close status window

This option closes the status window if no error occurs during erasing, blank check, programming verification and reading.

► After programming: Close status window

This option closes the status window if no error occurs during programming and the subsequent verification.

► Beep after successful finishing

With this option active, the program calls up the standard Windows system beep if the operation (such as erasing, programming, etc.) went smoothly.

► Beep after unsuccessful finishing

With this option active, the program calls up the standard Windows system beep if an error or warning occurs during the operation (such as erasing, programming, etc.).

► Turn off all sound for UP

With this option on, the program does not produce any sounds.

► Delay for VDD switching on/off when supplied from programmer

This option is important for programming PCB-placed devices via an ICSP cable. It determines the length of the delay after voltage is connected to or disconnected from a device.

Both PRESTO and FORTE feature an overcurrent protection. This means that a test for excessive current of approximately 100 mA in power supply voltage is performed after connecting power to the device and expiration of the delay time set in **Switch on**.

Similarly the delay time set in **Discharge** specifies how late after switching the power supply off a check should be performed if no voltage is present any longer at the pin.

If a blocking capacitor is connected to the device's power supply pins (recommended), the voltage at the pin changes more slowly. This could cause problems during programming, but they can be eliminated by prolonging the charging and discharging time.

Too long a time increases the risk of damaging the device if connected incorrectly while too short a time could cause programmer's circuits to still detect excessive current flowing to the application's capacitors. A formula for an approximate determination of the necessary time can be found in [Appendix B: Use of ICSP](#).

► Do not perform blank check before cfg word programming

Most rewritable devices can overwrite the configuration word without erasing the whole device content. Skipping the blank check of the configuration word utilizes this possibility, i.e. the program ignores the not erased word.

This option does not apply to the whole-device programming in which the device is erased completely. It concerns only the configuration word and its overwriting.

► Do not perform blank check after erasing

This option speeds up the programming process and is useful especially for debugging. The danger is that an incorrectly erased device is subsequently incorrectly programmed and the fault only gets detected later. On the other hand, a device is erased incorrectly only once in several hundred attempts.

► Do not erase device before programming

The device is not erased before programming.

► Do not erase data memory before its programming

This option only concerns programming of Atmel AVR devices e.g. ATmega8. Data memory of this family devices does not require to be erased before programming. If this option is not activated, whole device will be erased before programming.

► Do not verify unprogrammed words at the end of the memory

If there is a location at the end of the code/main memory containing only default values, it is not verified.

This option speeds up the verification of the programmed memory as the content of the “empty” memory at its end usually does not matter.

► Do not verify

This option completely switches off the verification of a programmed device. Such off-switching can radically speed up the programming process during development.

This option must not be activated for production as correctness of the programmed content would not be guaranteed.

► Verify with two supply voltages

This option is available only for FORTE and only for the internal power supply from the programmer. It allows you to perform the verification at two different power supply voltages defined by the user.

Some device manufacturers recommend to verify the content after production programming at two different voltages corresponding with the approved range of the device's power supply voltages.

Options → Program settings → Panels

Keyboard shortcut: Shift+F10

This part of the Options menu allows you to alter the application's appearance. The user can set where and how some control components are to be displayed.

► Display selected device on toolbar

In addition to the status bar, the selected device is also displayed in the toolbar.

► Display selected programmer on toolbar

In addition to the status bar, the selected programmer is also displayed in the toolbar.

► Display the status bar in the lower part of the window

This option determines whether the status bar is to be displayed or not.

► Display icons on toolbar buttons

Icons of individual tools are displayed in the toolbar.

► Display descriptions on toolbar buttons

Tool names are displayed next to individual tools in the toolbar.

If the **Descriptions on toolbar buttons to the right** option is used, the total toolbar height is reduced to a half.

► Show mass production counter in status bar

This option displays the mass production counter in the status bar. The counter shows the number of devices programmed and the number of devices programmed successfully.

If you use the **Count all actions option**, the counter includes all actions performed with the device (such as reading, erasing, data memory programming, etc.).

Show values description displays explanatory notes to individual counter items for easier understanding.

If you want to exclude operations that triggered a warning from the correct operations, use the **If action ends with warning assume as erroneous** option.

The choice **Reset counters on project open** causes, that the counters are reset on any project file load, including automatic project load during program start.

Counter style allows you to choose whether the counter should display the **good/bad** or **good/total** figures.

The **Counter reset**, button can be used for zeroing the counters while their initial values can be set in the **Preset counter** values fields.

Options → Program settings → Files

Keyboard shortcut: Shift+F10

This tab holds all the settings for reading data from and saving data to files.

► File save style

The **File save style** panel offers the possibility not to always save all areas of all editors in the file, but rather only some. UP then asks questions based on the saving style settings before saving different project editors.

► Automatically check for newer versions of actual file

This option helps especially in debugging a program. The program re-loads the file if it detects a change in the file modification date.

► Check device type when loading .hex file

If the device type has been saved in the corresponding Intel-HEX file and it does not agree with the currently selected device type, the program points out this discrepancy.

► Save device type into .hex file

The program adds one more line below the end of file command specifying the type of device for which the file is being saved.

Such a modified file does not comply with the Intel-HEX format, but most programs working with the Intel-HEX format ignore this line.

For further information about the Intel-HEX format see

► Warn when loaded HEX does not contain CFG memory data

If the file does not contain configuration memory data and the data are expected for the chosen device, a warning message is displayed.

► Warn when loaded HEX is not aligned to word size.

If the file is not aligned to the word size of the memory of the device, a warning message is displayed.

► Binary file loading and saving style

This panel provides for the setting of how .bin files are to be loaded and saved if a device with more than one byte per word is selected.

Available options are: the program always asks before loading or saving a .bin file (**Ask if to load/save .bin as Big or Little Endian**), or without asking, the program always loads files as Little Endian (**Never ask, load/save as Little Endian**) or as Big Endian (**Never ask, load/save as Big Endian**).

► Save unused locations to .hex file

If not all positions are saved, the final file is smaller, but it can cause difficulties as a cell is considered an “empty position” if it contains only ones (e.i. FFFh, 3FFFh, etc.). Yet this could be a meaningful instruction (3FFFh is Microchip PIC addlw -1 instruction, for example).

As UP always saves files by larger blocks, (by eight or sixteen bytes), the danger of losing an instruction by such saving is rather small in reality.

If you use memory initialization prior to loading a .hex file (which is recommended), even a program loaded from a reduced .hex file will be correctly programmed as the missing instructions are created “automatically”.

► Clear code/main / data memory / ID positions before file reading

This location is filled with ones and only then a file is loaded. This way all positions that are not saved in the .hex file get erased.

This option is also important if no “empty” locations are saved in the .hex file (see ► [Save unused locations to .hex file](#)).

► Erase configuration memory before file reading

With this option activated, the configuration memory is initialized before a file for code/main memory is loaded.

If no fuses are saved in the file, it is recommended to deactivate this option. At the beginning of the work, the user can set the content of the configuration memory and then the fuses do not have to be set again if the file is repeatedly loaded.

► Read data memory not from the file but from the device

If you want to make sure that the content of the data memory does not get overwritten, use the ► [Program all except data memory](#) option. If, however the ► [Program all](#) option is selected by accident (by unintended pressing of the GO button, for example), the content of the data memory would be erased.

For such cases, this option of **Read data memory not from the file but from the device** is available. The program fills in the given location with the memory content of the device connected to the programmer.

Advice

This option could cause unexpected actions during work with the programmer such as switching the application on or starting the UP program.

► Read ID positions not from the file but from the device

If you want to preserve the content of the ID positions, use the **Read ID positions not from the file but from the device** option. The program fills in the given location with the memory content of the device connected to the programmer before starting the programming itself.

Advice

This option could cause unexpected actions during work with the programmer such as switching the application on or starting the UP program.

► Project saving style

This panel allows you to set how projects should be saved when exiting UP. Available options are: save automatically, ask before saving or keep the original file (i.e. do not save).

Options → Program settings → Colors

Keyboard shortcut: Shift+F10

This is where you can change and save colors of HEX editors so that they suit your needs and your aesthetic preferences.

A front color, a background color and a font can be selected for all the listed text segments.

Options → Program settings → Editors

Keyboard shortcut: Shift+F10

► Code/main memory editor: show words as bytes

Individual words can be displayed by bytes in case of devices with 16-bit-long words.

► Code/main memory editor 8 words wide

This option narrows the editor from the original sixteen cells down to eight. The option is suitable especially for small monitors. It can change automatically when a different device type is selected.

The same option can be set for others memories:

► Data memory editor 8 words wide

► Boot memory editor 8 words wide

► Show only the lowest byte of word in ASCII

When this option is activated, the program shows the ASCII translation of only the lowest byte of word, which can be useful especially for PIC MCUs.

► Mask ID positions while reading from device, from file, etc.

Some manufacturers' specifications recommend saving only masked data (with only four bits usable) in ID positions. With this option activated, the program always applies this bit mask when reading ID positions from different sources.

► Mask ID positions during direct user input

With this option activated, the program applies the bit mask to each user-modification of ID positions. For further information see ► [Mask ID positions while reading from device, from file, etc..](#)

► Configuration memory editor: show cfg word instead of fuses

This option is recommended for advanced users only. It is not saved in the UP configuration file for safety reasons.

Direct editing of fuses is understood as direct writing of a configuration word value in the hexadecimal form.

When a “non-translatable” configuration word is entered, the program leaves the unrecognized items unchanged unless the user changes them him/herself. This typically concerns CP fuses having several bits but only two values.

Options → Program settings → Serial numbers

Keyboard shortcut: Shift+F10

For further information on working with serial numbers see [Serial Numbers](#).

► Serial numbers

This tab allows you to choose whether serial numbers are to be used and if so then whether they should be read from a file or computed and whether they should be automatically written to the corresponding location.

► Prepare S/N before programming

This option prepares a serial number in the selected memory location before the actual device programming.

► Find successor after programming

Once one programming procedure is successfully completed, the system proceeds to the following serial number. If this option is not activated, it is still possible to proceed to the following number manually by clicking the **Next** button on the Serial numbers tab – see [Serial Numbers](#).

► Prepare S/N after programming

This option causes that a serial number is prepared in the selected memory location after the device programming.

► Serial number interval

This defines by what value the following serial number will be larger or smaller.

► Log to file

By activating this option and by selecting a log file in the field, information about correctly and incorrectly programmed devices as well as the programming time is saved in the selected file.

For further information see [Serial Numbers](#).

► Serial number length (the number of characters)

This field determines how many characters the serial number can hold. For example, 4 characters provide for the serial numbers 0001 to 9999 in base 10 (i.e. in decimal form).

► Number base

This option defines the base of the serial number characters. Base 10 and base 16 are available (i.e. the decimal and hexadecimal forms).

► Code as ASCII

With this option activated, serial numbers are legible as ASCII characters.

► Initial serial number

This field defines the initial value from which serial numbers are to be computed.

► Next S/N

This field defines how the following serial number is to be generated.

If **The same** is selected, the serial number does not change. If **One interval higher** is selected, the following number will be larger by the value of ► [Serial number interval](#) while if **One interval lower** is selected, it will reduce by that value.

The **Generated LSFR** option generates the numbers in a pseudo-random sequence. This means that the sequence will always be the same if the same **Initial serial**

number and the same **Serial numbers step** is used.

► Destination

This panel determines the memory location in which the serial numbers are to be stored. **Code/main memory**, **data memory** and **ID positions** are available as options.

► Hexadecimal address of first word

This address defines where the first word of the serial number is to start in the selected memory type.

► Fill with RETLW instruction

Individual words of the serial number can be filled with RETLW instruction in Microchip microcontrollers. This option is available only if the serial number is located in the code/main memory.

► Characters per word

This panel determines how many serial number characters form one word. Options of 1 to 4 characters per word are available.

► Sequence

This panel sets how individual serial number characters and words are to be ordered.

For example, if you have a base 10 serial number consisting of four characters organized as 2 characters per word and you are working let's say with 1234 as the serial number, it will be saved in the following ways:

```
HiLo hilo: 12 34
hilo HiLo: 34 12
LoHi lohi: 21 43
lohi LoHi: 43 21
```

Options → Program settings →
Checksum

► Show checksum in status bar

After enabling of this setting the checksum of the code memory will be shown on the status bar.

Note: Doubleclick on the checksum value in the status bar will cause the value recalculation.

► Checksum algorithm

Using this choice the checksum calculation algorithm can be chosen.

Options → Program settings →
Others

Keyboard shortcut: Shift+F10

► Update check settings

Here you can set if the program should ask for your permission to connect to the Internet and check for updates upon each start or not.

For further information see [Updating UP](#).

► Allow internal and external supply voltages collision



Warning


A collision of power supply voltages can damage the programmer or the application!

If you approve the collision of supply voltages, it allows the programmer to connect its internal voltage to pin VDD at times when it can already see a voltage present there. This could damage both the programmer and/or the application being programmed.

This option has been included for very specific cases. One of them can be a request to program an application, which does not have any VDD pin. Then the application must be powered from its own source but the programmer's output buffers must be powered from the USB. Yet as the voltage at the application's data signals

“sneaks” through the protective diodes into the output section of the programmer, the programmer can see a certain small voltage present at VDD and refuses to connect its own internal voltage to it.

► Do not show warning if internal 5 V is switched on with 3.3 V device

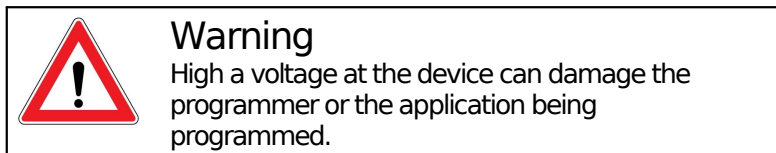

This option can be used to suppress the warning if a higher voltage is switched on at the VDD output than the value allowed for the particular device.

If there is a voltage convertor integrated in the application between the device being programmed and the programming interface, it might be useful to use this option of programming at a higher voltage than what the device has been designed for.

This option is available only for PRESTO.

► Allow to change supply voltage level when it is on

In order to protect the application connected to FORTE from damage, it is typically forbidden to change the output voltage level if the voltage is currently connected to the application. After activating this option, the output voltage can be changed at any time within the range that the device being programmed can cope with.

► Allow external supply voltage for devices requiring VPP before VCC.

For some devices their manufacturer requires the programming voltage to be connected before the supply voltage of the device. When the external supply voltage is used, it does not comply with the specification. In this case a warning is displayed, which can be permanently disabled using this setting.

Disabling of this warning should be well considered. This warning is displayed for devices for which the external supply voltage violates the device manufacturer specification.

► Pin T during programming

With this setting it is possible to set a logical level during programming on the T pin. The selected logical level will be visible on the pin only when the supply voltage is available at the VDD pin of the programmer.

In case that the T pin is used for programming, this function will not be available.

This option is available only for FORTE.

► Pin T after programming

With this setting it is possible to set a logical level, which will appear on the T pin after programming. The selected logical level will be visible on the pin only when the supply voltage is available at the VDD pin of the programmer.

In case that the T pin is used for programming, this function will not be available.

This option is available only for FORTE.

Options → Select programmer

Settings concerning the programmer and the communication port are described in [Programmer Selection](#).

Options → Language selection...

Keyboard shortcut: Ctrl+L

A file with a different language localization can be selected using the Windows standard dialog. This means that one program installation can easily switch between different user-interface languages.

Options → Keyboard shortcuts...

Keyboard shortcut: Ctrl+K

Using this dialog window you can define or change keyboard shortcuts for most commands the programmer is capable of performing.

This window also provides for setting the required behavior of the **GO** button.

Help Menu

Help → Help on program

Keyboard shortcut: F1

This command opens the help that you are are just reading.

Help → List of supported devices

This command displays a list of devices currently supported by the latest version of UP.

Help → Check Internet for updates

The program connects to the Internet and checks if you are using the latest version.

Help → ASIX website

This command opens www.asix.cz, the website of ASIX s.r.o. where you can find the latest drivers and manuals for ASIX products.

Help → About

Basic information on the program and a contact to technical support.

4.5.4 Programmer Settings Window

All important settings concerning the programmer and the applications to be programmed are displayed in the programmer settings window.

The window appearance changes in accordance with the selected programmer and device.

FORTE Programmer Settings Window

Power supply from the programmer

This trackbar allows the user to set the voltage level supplied to the application by the programmer.

In idle state

If this option is checked, the programmer supplies power to the application even when not programming.

During programming

If this option is checked, voltage from the programmer will be used during programming.

Reset

This button allows you to switch levels on the device's **reset** pin between the level required for reset and high impedance.

Reset is active if voltage is present on the power supply pin.

Settings Associated with PIC Microcontrollers

► Programming method

- **HVP** Traditional programming will be applied using a voltage of 8 V to 13 V at pin P.
- **LVP** Programming utilizing the microcontroller's LVP pin will be applied; only logical values of 0 or 1 are present at programmer's pin P.

► Use PE

Programming utilizing the **Use PE** option can be applied to PIC24 and dsPIC33 devices. PE stands for Programming Executive and it is a programming method frequently proving to be faster. The Programming Executive does verification after programming, that is why UP does not verify after PE programming.

Boot memory programming

This allows to select the boot memory region to be programmed or checked.

Settings Associated with AVR and 8051 Microcontrollers

Oscillator frequency

An external oscillator or a functional internal oscillator must be connected in the course of AVR microcontroller programming. The frequency setting must match the frequency at which the device's oscillator is really running, after eventual dividers. The maximum speed of communication with the microcontroller then depends on the frequency of this oscillator.

Faster Programming with Slow Clock

If this option is active, once the device is erased, the fuses are programmed at the maximum frequency of the internal oscillator. This allows the programmer to communicate with the device at a faster speed. At the end of programming, the required value of the communication memory including the clock speed is programmed.

This option has its effect only if the whole device is

programmed.

Inverse Reset

With this option activated, the programmer generates an inverse reset signal.

This option is appreciated if the application includes a reset circuit that needs an inverse signal at the input compared to the output signal sent to the microcontroller, and if the programmer is connected via this reset circuit.

HVP

If this option is checked, the programmer uses the “high” voltage at pin P for communication with the device.

This allows you to program a device with the external RESET signal switched off.

Settings Associated with I2C Memory Chips

I2C Bus Speed

Select the maximum possible speed of the I²C bus. The programmer switches on the internal pull-up of 2.4 kΩ while working on the I²C bus.

I2C Memory Address

Select the address of the I²C memory on the bus.

Settings Associated with SPI Flash Chips

► Start address

Sets the address range for work with the memory. **Start address** is the first address, where the selected operation is executed.

► End address

Sets the address range for work with the memory. **End address** is the last address, where the selected operation is executed.

PRESTO Programmer Settings Window

In idle state

If this option is checked, the programmer supplies power to the application even when not programming.

During programming

If this option is checked, voltage from the programmer will be used during programming.

Settings Associated with PIC Microcontrollers

MCLR Pin Control

The logical value present at pin P1 (VPP) can be controlled by the **Run**, **Stop**, **Tristate** and **Reset** buttons in the idle state if a voltage is present.

The **Reset** button generates a resetting pulse.

Programming Method

- **HVP** Traditional programming is applied with 13 V present at VPP.
- **LVP** Programming utilizing microcontroller's LVP pin is applied, only logical values of 0 or 1 are present at programmer's pin P.

Algorithm Programming

- **Auto** An algorithm is selected according to the voltage currently present at VDD.
- **Ucc=5 V** The algorithm for fast 5 V programming is used.
- **Ucc=2.7 to 5.5 V** The algorithm for slow programming is used with the benefit of working at all power supply voltages.

Use PE

Programming utilizing the **Use PE** option can be applied to PIC24 and dsPIC33 devices. PE stands for Programming Executive and it is a programming method frequently proving to be faster. The Programming Executive does verification after programming, that is why UP does not verify after PE programming.

Boot memory programming

This allows to select the boot memory region to be programmed or checked.

Settings Associated with AVR and 8051 Microcontrollers

Oscillator Frequency

An external oscillator or a functional internal oscillator must be connected in the course of AVR microcontroller programming. The frequency setting must match the frequency at which the device's oscillator is really running, after eventual dividers. The maximum speed of communication with the microcontroller then depends on the frequency of this oscillator.

Faster Programming with Slow Clock

If this option is active, once the device is erased, the fuses are programmed at the maximum frequency of the internal oscillator. This allows the programmer to communicate with the device at a faster speed. At the end of programming, the required value of the communication memory including the clock speed is programmed.

This option has its effect only if the whole device is programmed.

Inverse Reset

With this option activated, the programmer generates an inverse reset signal.

This option is appreciated if the application includes a

reset circuit that needs an inverse signal at the input compared to the output signal sent to the microcontroller and if the programmer is connected via this reset circuit.

HVP

If this option is checked, the programmer uses the “high” voltage at pin P for communication with the device.

This allows you to program a device with the external RESET signal switched off.

Settings Associated with I2C Memory Chips

I2C Bus Speed

Select the maximum possible speed of the I²C bus. The programmer switches on the internal pull-up of 2.2 kΩ while working on the I²C bus.

I2C Memory Address

Select the address of the I²C memory on the bus.

Settings Associated with SPI Flash Chips

► Start address

Sets the address range for work with the memory. **Start address** is the first address, where the selected operation is executed.

► End address

Sets the address range for work with the memory. **End address** is the last address, where the selected operation is executed.

4.5.5 HEX Editor Windows

HEX editors are used for displaying the content of a memory chip to be programmed.

Different colors are used in HEX editors to differentiate

between states of different cells to make it easy to see which cells have been read from a file, which have been successfully programmed, etc.

Colors may be user-assigned. This is especially recommended for workstations with displays/screens displaying only a limited number of colors.

Selecting an Area

An area can be selected in a HEX editor by holding the Shift key down and pressing the cursor keys (i.e. arrows).

Once a required area is selected, it can be filled with a required value. The values can also be filled with RETLW instruction. These options are available in the context menu (opens by mouse right-click).

Code/Main Memory Editor

*Menu: **View** → **Display code/main memory***

Keyboard shortcut to open the window: F10

Keyboard shortcut to close the window: Esc

The code/main memory editor displays the code/main memory content or the content of the memory itself in case of serial EEPROM chips (24xx, 93xx,...).

Data Memory (EEPROM) Editor

*Menu: **View** → **Display data memory***

Keyboard shortcut to open the window: F11

Keyboard shortcut to close the window: Esc

The data memory editor is used for displaying the content of the additional memory in some devices (typically EEPROM).

Not all devices have an additional memory. This means the editor may not be available for some devices.

Configuration Memory Editor

Menu: **View** → **Display configuration memory**

Keyboard shortcut to open the window: F12

Keyboard shortcut to close the window: Esc

The configuration memory editor displays settings that are to be programmed in a device, but are not part of any of the above memory types.

The configuration memory editor content depends on the selected device type. It is necessary to get acquainted with the device's data sheet in order to get a closer explanation of individual options in this window.

Not all devices need configuration data. This means the editor may not be available for some devices.

Tips for Advanced Users

Even though the configuration memory may be presented as a set of settings, in reality it is nothing more than a memory that can be approached cell by cell. Due to this, it is possible to display the memory in this way.

This can be achieved by activating **Options** → **Program settings** → **Editors** → **Configuration memory editor: show cfg word instead of fuses** option or by double-clicking the configuration memory window.

The device's ID positions (do not mistake for Device ID) can also be found in the configuration memory window. ID positions can be programmed with values identifying the device, such as the serial number, for example. ID positions can always be read - even if the device is locked against reading.

According to the recommendation of the Microchip, ID positions should not be programmed with any value; only a certain number of bits (typically 4) should carry data for identification while other bits should be programmed with the default value.

This can be achieved by activating **Options** → **Program**

settings → **Editors** → **Mask ID positions...**

4.6 Running UP from Command Line

The UP program can alternatively be controlled from the command line.

The program itself makes sure that it always runs in one instance only (with one class name). Should a second instance (with the same class name) be started, parameters from the command line are transferred to the first instance for execution. Up can be started in more instances using different class name, see **/wnd** in List of Parameters.

4.6.1 List of Parameters

```
UP.EXE [{ask | /q}]
[/{e File_with_eepromm.hex | /noe}] [{/p |[/pdiff] | /
o}] File.hex | File.ppr [/part device_name] [/eeonly]
[/erase][/w[nd]up_window_class] [/cfg] [/devid] [/
blank] [/verify File] [/read File] [/s SN_programmer's]
[/progname name] [/noboot] [/boot] [/code] [/
getpartrev]
```

Legend

- Text presented here in **bold** is to be keyed in in the command line exactly as printed here.
- Text presented here in *italics* is to be replaced by the corresponding parameter. For example, *file_name* should be replaced with the real name of a file to be opened.
- Text in braces { } separated by the | sign represents a selection of one of the presented options. For example, { A | B } means "choose either A or B".
- Text in square brackets [] presents an optional parameter - it can be keyed in but does not have to.
- Text in quotation marks " " is a mnemonic.

/ask	To be used linked with /p . The program always asks if it is to continue before launching the actual device programming even if the program settings specify not to ask. The dialog displays the selected device type.	/part name	This selects the required device in UP.
/q /quiet	"Quiet" mode. The program does not ask any questions. If it needs to display a dialog, the execution finishes with an error. See UP program return codes.	/erase	This erases the device.
/e file	"EEPROM" file. For keying in the name of a file with data for data memory, if needed. If the file name contains space(s), it must be enclosed by inverted commas.	/wnd class name	A different window class name. More than one instance of the UP program can be started using this parameter (running then simultaneously). Each new instance of the running UP must have a different class name.
/noe	"No EEPROM". The program skips the device data memory programming. If this parameter is used for MSP430 microcontroller programming, the information memory is erased and programmed.	/cfg	If this parameter is used in combination with parameter /p , only the configuration memory gets programmed. This is useful for programming AVR microcontrollers, for example, which can be switched to a faster oscillator and then programmed much faster.
/p file	To "program". The keyed in file will be programmed. If the file name contains space(s), it must be enclosed by inverted commas.	/devid	If this parameter is used in combination with parameter /p , the software only checks the device's Device ID.
/pdiff file	To "program the difference". The keyed in file gets programmed by the differential algorithm. If the file name contains space(s), it must be enclosed by inverted commas.	/blank	This checks device erasure (blank check) and returns an error code if the result is not OK.
/o file	To open. The keyed in file opens. This parameter is optional. If the file name contains space(s), it must be enclosed by inverted commas.	/verify file	This verifies the device.
/eeonly	This executes the selected operation only with the data (EEPROM) memory or only with the information memory in the case of MSP430.	/read file	This reads the device and saves the read content to the file.
		/s programmer_SN	This makes it possible to select a programmer by its serial number. The serial number is to be keyed in the way it is displayed in the UP program and printed on the programmer bottom. Example: 016709 or A6016709.
		/progname name	This makes it possible to select a programmer by its name such as PRESTO or FORTE for example.
		/noboot	This skips programming of the MSP430 boot memory.

/boot This performs the selected operation only with the MSP430 boot memory.

Note

PIC32 microcontrollers also have a boot memory. This, however, uses variables and a data memory form for programming, so it works with parameters for a data memory and not with parameters for a boot memory. A similar situation can be found in the information memory of MSP430 and CC430 microcontrollers.

/code This performs the selected operation only with code or main memory.

/getpartrev Only reads the revision of the device and returns revision + 0x10000 as the error code.

Using a Project File

If you work on more than one project, it can happen that the program is set up for a different device (or even a different programmer if you have more) than what you expected. To avoid such situations, it is recommended to use project files (.PPR) that hold all the program settings needed for programming and paths to the work files.

Examples of Use

The installation directory of the UP software contains the “**read_avr_eeprom.bat**” and “**set_idle_power_1.bat**” sample batch files showing the use of command line parameters.

File Opening

up.exe file_name

up.exe file.hex

*up.exe "C:\My Documents\Recent Projects\PIC
\My latest project\flasher.hex"*

Device Programming

up.exe /p file_name

up.exe /p file.hex

*up.exe /p "C:\My Documents\Recent Projects\PIC
\My latest project\flasher.hex"*

4.6.2 Program Return Codes

- | | |
|---|---|
| 0 | Problem-free execution. |
| 1 | File error. File not found or incorrect file format, for example. |
| 2 | Equipment error. Communication test failed, communication error. |
| 3 | Programming preparation error. device cannot be erased, etc. |
| 4 | Programming error. |
| 5 | Verification error. |
| 6 | Programming failed due to a need to communicate with user. |
| 7 | Device ID error. |
| 8 | Not supported. |

0x10000 + const Revision of the device read using /getpartrev parameter.

Note: he return value can be found in the %errorlevel% variable if working with batch files.

See the “read_avr_eeprom.bat” sample batch file in the installation directory of UP.

4.7 Running UP by Means of Windows Messages

The UP program can be controlled by means of messages of the Windows operating system. The running instance of UP executes the requested command immediately after message receipt.

Messages must be sent to "up v1.x" class window. The message type is always of WM_USER.

Commands are identified by "wParam" while parameters by "lParam".

4.7.1 List of Commands

Unless specified otherwise, the command returns to its return value:

- 0 error, failed
- 1 everything worked OK

Commands with a wParam of 1, 2, 3, 4, 5, 6 a 7 are thread blocking.

wParam	lParam	Description
0	0	does not perform anything, returns 1
	1	SetForegroundWindow()
	2	Maximize, SetForegroundWindow()
1	any	programs everything, same return code as from the command line
2	any	programming excl. data memory, same return code as from the command line
3	see below	programming incl. erasing, same return code as from the command line
	bit 0 = 1	code/main memory
	bit 1 = 1	data memory (EEPROM)
	bit 2 = 1	configuration memory
	bit 3 = 1	boot memory (MSP430, CC430)
4	see below	reading
	bit 0 = 1	code/main memory
	bit 1 = 1	data memory (EEPROM)
	bit 2 = 1	configuration memory
	bit 3 = 1	boot memory (MSP430, CC430)
5	see below	differential programming
	bit 0 = 1	code/main memory
	bit 1 = 1	data memory (EEPROM)
	bit 2 = 1	configuration memory

	bit 3 = 1	boot memory (MSP430, CC430)
6	see below	verification
	bit 0 = 1	code/main memory
	bit 1 = 1	data memory (EEPROM)
	bit 2 = 1	configuration memory
	bit 3 = 1	boot memory (MSP430, CC430)
7	see below	erasing, same return code as from the command line
	bit 0 = 1	code/main memory
	bit 1 = 1	data memory (EEPROM)
	bit 3 = 1	boot memory (MSP430, CC430)
8	see below	BlankCheck of memory, same return code as from the command line
	bit 0 = 1	code/main memory
	bit 1 = 1	data memory (EEPROM)
	bit 2 = 1	configuration memory
	bit 3 = 1	boot memory (MSP430, CC430)
15	any	presses the GO button, returns 1
16	see below	asks if the programmer supports the function
	0	MCLRControl_Run
	1	MCLRControl_Stop
	2	MCLRControl_Reset
	8	current voltage at pin VDD
17	see below	performs the programmer function
	0	MCLRControl_Run
	1	MCLRControl_Stop
	2	MCLRControl_Reset
	8	current voltage at pin VDD return value PRESTO: 0 - unknown level 1 - 0 V 2 - approx. 2 V 3 - approx. 5 V

		4 - more than 6 V return value FORTE: -1 - measuring error xx - measured voltage $\times 10$ example: 33 means 3.3 V
32	see below	UP program initialization
	bit 0 = 1	reload settings (reload project/ini file or registry)
	bit 1 = 1	reload language file
	bit 2 = 1	recreate programmer (like programmer was changed)
	bit 3 = 1	reload programmer settings (like port settings)
	bit 4 = 1	reload selected device
	bit 5 = 1	reload current file (.hex, .bin, ...)
	bit 6 = 1	recreate all dialog windows (adjust their size when reloading device)
	0x 0100	refresh device specific windows
	0x 0200	refresh all editors
	0x 0300	refresh project captions
33	1	save all project settings
48	see below ¹	save current file (same as Ctrl+S)
	bit 0 = 1	code/main memory
	bit 1 = 1	data memory (EEPROM)
	bit 2 = 1	configuration memory
	bit 3 = 1	boot memory (MSP430, CC430)
56	0	returns the handle of the UP main form

Table 8: Commands WM_USER

A message of the WM_CLOSE type closes the UP program.

Example of use

```
var
    window: HWND;
begin
    window := FindWindow('up v1.x', nil);
    Result := SendMessage(window,
        WM_USER, 0, 0);
end.
```

¹ Only parameter IParam=1 or IParam=2 are allowed for AVR microcontrollers.

4.8 UP_DLL.DLL Library

Thanks to this library strings can be exchanged with the UP program.

As the library needs to communicate with UP, the program must be running. UP_DLL cannot work on its own.

```
unit up_dll;
interface

Function UP_LoadFile (FileName: PChar; style: integer): integer; stdcall;
(*
 * Load File (with extension .hex or .ppr);
 * Loading of .ppr file can result in loading * .
 * hex file too;
 * Result codes are same like on command
 * line.
 *)
Function UP_GetStrValue(ValueName: PChar; Value: PChar; Size: integer): integer; stdcall;

Function UP_GetIntValue(ValueName: PChar; var Value: integer): LongBool; stdcall;

Function UP_SetStrValue(ValueName: PChar; Value: PChar): LongBool; stdcall;

Function UP_SetIntValue(ValueName: PChar; Value: integer): LongBool; stdcall;

Function UP_LoadFile_Wnd(WndClass: PChar; FileName: PChar; style: integer): integer; stdcall;

Function UP_SetStrValue_Wnd(WndClass: PChar; Value: PChar): LongBool; stdcall;
```

```
eName: PChar; Value:PChar): BOOL; stdcall;

Function UP_SetIntValue_Wnd(WndClass:PChar; Value:integer): BOOL; stdcall;

Function UP_GetStrValue_Wnd(WndClass:PChar; Value: PChar; Size: integer): integer; stdcall;

Function UP_GetIntValue_Wnd(WndClass:PChar; Value: PChar; var Value: integer): LongBool; stdcall;

(*
* All these functions are used for changing
* internal settings of UP in runtime.
* UP_GetIntValue, UP_SetStrValue,
* UP_SetIntValue returns nonzero if
* successful
* UP_GetStrValue returns amount of
* characters to copy into Value string
* including null terminator
* If Size is less than required size, no
* characters are copied.
*)

implementation

function UP_LoadFile; external 'up_dll.dll';

function UP_GetStrValue; external 'up_dll.dll';

function UP_GetIntValue; external 'up_dll.dll';

function UP_SetStrValue; external 'up_dll.dll';

function UP_SetIntValue; external 'up_dll.dll';

function UP_LoadFile_Wnd; external 'up_dll.dll';

function UP_SetStrValue_Wnd; external 'up_dll.dll';

function UP_SetIntValue_Wnd; external 'up_dll.dll';
```

```
l';

function UP_GetStrValue_Wnd; external 'up_dll.dll';
l';
function UP_GetIntValue_Wnd; external 'up_dll.dll';
l';

end.
```

For further information see [Appendix A UP_DLL.DLL](#).

4.9 Running More Than One Instance of UP

If you need to connect more than one programmer to one computer, a separate instance of UP must be running for each programmer connected.

UP should be running in just one instance for standard use. Each additional instance just sends commands from the command line to the already running first instance or makes it visible in another way.

However, UP can be started and run in several instances if used together with the parameter **/w** and a different window class name. Those programs (instances) having the same window class name will communicate with each other.

Parameters for the program controlled from the command line are described in [Running UP from Command Line](#).

Example of use

The first instance of UP can be started the standard way from the start menu.

Additional instances can be started from the command line as **up.exe /w "another up"**, for example.

4.10 Access of More UP Instances to One Programmer

Only one program or utility can access one programmer at any one time.

The operating system takes care of the access rights of programmers connected to the USB interface.

If UP is running, the operating system does not allow any other program to access the selected programmer as UP needs to continually check the GO button state and the voltage on the feeding pin.

UP can temporarily be prohibited to access the programmer and the programmer freed this way for another application. This can be done by choosing **Options** → **Select programmer**. As long as this dialog is open, another program can access the programmer. The data the system works with in HEX editors does not get lost by closing this dialog window.

4.11 Updating UP

If a newer program version is available on the web, it is recommended to update the existing version as it may eliminate known bugs or make the programming algorithm for a particular device more efficient.

New versions also add newly supported types of devices.

Updates are free and are very easy. You can download a new program version from http://www.asix.net/dwnld_up.htm and simply install it over the previous one by running the installer and clicking the **Next** button till it finishes.

You do not have to worry about losing the settings you created in your current program version. The installation preserves all of them.

You can set an automatic check for newer versions on the web in *Options* → *Program settings* → *Others*.

4.12 Appendix A UP_DLL.DLL

This appendix deals with the names of settings and values of functions in the UP_DLL.DLL library.

Please look at the sample batch files in UP installation folder for better understanding.

The following information is provided only for experienced users and does not provide any guarantee.

4.12.1 Data Types

string	is string
integer	signed 32bit value
boolean	accessed like integers; 0 is false, other value is true

4.12.2 List of UP variables

Prog.LoadFileBfgProg

boolean

If true, current file is reloaded before device (or its part) is programmed.

Prog.LoadFileBfgProgWarnMod

boolean

If true, the program warns when it is set to reload current file before programming and data in some editor have been manually modified.

Prog.LoadFileBfgProgWarnOnNoChange

boolean

If true, the program warns when it is set to reload current file before programming and the content of the loaded file has not changed from the previous programming.

File.AutoCheck

boolean

If true, current file is periodically tested for changes.

File.LoadOnModify

boolean

If true, when change is detected, question pops up.

FileLoad.ClearData

FileLoad.ClearCfg

FileLoad.ClearID

FileLoad.ClearCode

boolean

If true, the contents of code memory is erased (in UP memory) before new file is loaded;

all cells not stored in the file will have its default (blank) state.

Part.Name

string

Selected device name

Prog.Name

string

Selected programmer name

Possible values are PREST, FORTE.

Prog.PortBase

integer

Serial number of programmer

Prog.UseOnlyThisSN

boolean

If true, the SN saved in the up.ini is always used regardless of the SN contained in a project file.

LanguageFile

string

Relative path to used language file

Project.File

string

Project file path

Project.Present

boolean

Project.Template

boolean

If true, the user is asked for project name before its saving.

HexFile.File

string

Opened current file path

HexFile.Present

boolean

HexFile.IHex

boolean

If true, the file with extension different from .HEX or .BIN is loaded as HEX file.

HexFile.Template

boolean

If true, the user is asked for name before saving.

HexFile.SaveVoid

boolean

If true, empty cells are saved, too.

HexFile.AskForBinEndian

boolean

If true, the user is asked if the loaded BIN file should be loaded as Little or Big endian.

HexFile.BinLittleEndian

boolean

If true, the loaded BIN file is loaded as Little endian.

HexFile.LoadDataAuto

boolean

If true, with file is loaded also a separate file for data memory.

HexFile.LastDataFile

string

Path of a separate file for data memory.

HexFile.DataHex

boolean

If true, the file for data memory with extension different from .HEX or .BIN is loaded as HEX file.

Prog.QBfrEraseFlash

boolean

Question before erasing flash devices

Prog.QBfrProgFlash

boolean

Question before programming flash devices

Prog.QBfrProg

boolean

Question before programming OTP devices

Prog.QBfrDiffProg

boolean

Question before differential programming (of flash devices)

Prog.QBfrProgCP

boolean

Warning before programming device with some kind of protection

Prog.CloseStatOnGoodAct

boolean

If true, status window will be automatically closed after read/verify etc... without errors.

Prog.CloseStatOnGoodProg

boolean

If true, status window will be automatically closed after programming without errors.

Prog.BeepOnGoodProg

boolean

If true, program makes a sound on successful programming.

Prog.BeepOnBadProg

boolean

If true, program makes a sound on unsuccessful programming.

Prog.SoundsOff

boolean

If true, all sounds of the program are switched off.

Prog.SkipBlankForCfg

boolean

If true, no blank check of part is performed before programming of configuration space.

Prog.SkipBlankCheck

boolean

If true, no blank check of device is performed before device programming.

Prog.SkipErase

boolean

If true, no erasing is performed before device programming.

Prog.SkipEraseData

boolean

If true, no erasing is performed before only data memory programming.

Prog.SkipLastFFVerify

boolean

If true, verification of empty FF positions at the end of the programmed memory is not preformed.

Prog.SkipVerify

boolean

If true, no verification is performed after programming.

Prog.DoubleVerify

boolean

If true, verification on two supply voltages is performed after programming. Supported by FORTE with internal supply voltage only.

Prog.DoubleVerifyV1

integer

Defines supply voltage size for the first verification, the value is in volts x 10.

Prog.DoubleVerifyV2

integer

Defines supply voltage size for the second verification, the value is in volts x 10.

Serial

integer

0	no serial numbers
1	serial numbers are from external file
2	serial numbers are calculated

Serial.Step

integer

Step of serial numbers

Serial.File

string

File name of external file with serial numbers

Serial.File.Next

string

Label of serial number

Serial.Length

integer

If serial number is computed, serial number length (digits)

Serial.Actual

(unsigned) integer

If serial number is computed, actual computed serial number (if decimal, coded as BCD)

Serial.ASCII

boolean

If serial number is computed, if true, serial number is stored to device as ASCII characters.

Serial.SaveTo

integer

- | | |
|---|------------------|
| 1 | code/main memory |
| 2 | data memory |
| 4 | ID positions |

Serial.Retlw

boolean

If serial number is computed, if true, memory cells are filled with retlw instructions.

Serial.Addr

integer

If serial number is computed, address where to save

Serial.CPW

integer

If serial number is computed, chars per word

Serial.Base

integer

If serial number is computed, base of serial number, can be only 10 or 16

Serial.Succ

integer

next serial number is

- | | |
|---|---------------|
| 0 | same |
| 1 | incremented |
| 2 | decremented |
| 3 | random (LSFR) |

Serial.Order

integer

- | | |
|---|-----------|
| 0 | HiLo hilo |
| 1 | hilo HiLo |
| 2 | LoHi lohi |
| 3 | lohi LoHi |

Serial.Write.BeforeProg

boolean

If true, current serial number is "written" into opened HEX editors just before programming the device.

Serial.Write.AfterProg

boolean

If true, current serial number is "written" into opened HEX editors after successful programming.

Serial.Succ.AfterProg

boolean

If true, next serial number is generated after successful programming.

Serial.LogSN

boolean

If true, the result of programming is logged to a selected file.

Serial.LogFile

string

File name of a file where the result of the programming will be logged.

ICSP.LongTime

boolean

If true, longer times for switching Vcc are taken.

ICSP.LongTime.Time.SwOn

integer

Time to wait after Vcc is switched on in microseconds.

ICSP.LongTime.Time.SwOff

integer

Time to wait after Vcc is switched off in microseconds.

SpecSettings.PREST.Power

integer

- | | |
|---|--------------------------------------|
| 0 | idle power supply is None / External |
| 1 | idle power supply is Internal 5 V |

SpecSettings.PREST.ProgPower

integer

- | | |
|---|--|
| 0 | power supply during programming is External 2.7 to 5.5 V |
| 1 | power supply during programming is Internal 5 V |

SpecSettings.PREST.i2cSpeed

integer

- | | |
|---|---------|
| 0 | 100 kHz |
| 1 | 500 kHz |
| 2 | 1 MHz |
| 3 | Maximal |

SpecSettings.PREST.i2cAddr

integer

- | | |
|---|-------------------------------|
| 0 | first suitable address or N/A |
| 1 | second suitable address |

etc...

SpecSettings.PREST.LVP

integer

- | | |
|---|------------|
| 0 | HVP method |
| 1 | LVP method |

SpecSettings.PREST.PICAlg

integer

- | | |
|---|---------------------|
| 0 | automatic selection |
| 1 | assume VDD = 5 V |
| 2 | assume VDD < 5 V |

SpecSettings.PREST.UsePE

boolean

If true, PE (programming executive) is used for programming of PIC MCUs.

SpecSettings.PREST.PIC32MZ_BootProg

integer

- | | |
|---|--------------------|
| 0 | Lower Boot alias |
| 1 | Boot Flash 1 and 2 |

SpecSettings.PREST.PSoCAlg

integer

- | | |
|---|---------------------|
| 0 | automatic selection |
| 1 | assume VDD > 3.6 V |
| 2 | assume VDD =< 3.6 V |

SpecSettings.PREST.PSoCRSTInit

integer

- | | |
|---|---------------|
| 0 | Reset mode |
| 1 | Power cycling |

SpecSettings.PREST.MSP430osc

integer

- | | |
|---|---------------------------------------|
| 0 | Calibrated internal RC oscillator |
| 1 | Not calibrated internal RC oscillator |

SpecSettings.PREST.MSP430speed

integer

- | | |
|---|---------|
| 0 | Normal |
| 1 | Slow |
| 2 | Slowest |

SpecSettings.PREST.MSP430EraseSegmentA

boolean

If true, MSP430 Segment A is erased.

SpecSettings.PREST.SPI_Flash_Freq

integer

- | | |
|---|---------|
| 0 | 3 MHz |
| 1 | 1.5 MHz |
| 2 | 750 kHz |

SpecSettings.PREST.AVRXTAL.CLK

SpecSettings.PREST.AVRXTAL.RPT

integers

represent maximum AVR oscillator frequency

values can be found in *.lng files at item

MainForm.PRESTSpecForm.ComboAVRXTAL.xxx.Items
where xxx is minimum divisor of system clock of selected AVR's SPI module. This is 2 for new AVRs, 3 and 4 for older AVRs and 24 for Atmel's 8051 arch. processors.

These settings can be found in ini file too at [SpecSettings.PREST], XTALRpt and XTALClk.

SpecSettings.PREST.AVRXTAL.AutoClk

boolean

If true, faster programming with slow clock is used for AVR MCUs.

SpecSettings.PREST.AVRRSTInverse

boolean

If true, the reset signal polarity is assumed to be inverse in comparison with standard polarity of the reset signal of the selected chip. It is supported with AVR and 8051 devices.

SpecSettings.PREST.AVRHVP

boolean

If true, high voltage method is used for AVR MCUs, it is supported for AVR TPI interface only.

SpecSettings.FORTE.UVCCLevel

integer

Defines the size of the internal supply voltage provided by FORTE programmer. The value is in volts x 10.

SpecSettings.FORTE.Power

boolean

If true, idle power supply is provided by FORTE programmer.

SpecSettings.FORTE.ProgPower

boolean

If true, the supply voltage during programming is provided by FORTE programmer.

SpecSettings.FORTE.LVP

integer

- | | |
|---|------------|
| 0 | HVP method |
| 1 | LVP method |

SpecSettings.FORTE.UsePE

boolean

If true, PE (programming executive) is used for programming of PIC MCUs, when programmed by FORTE programmer.

SpecSettings.FORTE.PIC32MZ_BootProg

integer

- | | |
|---|--------------------|
| 0 | Lower Boot alias |
| 1 | Boot Flash 1 and 2 |

SpecSettings.FORTE.PSoCAlg

integer

- | | |
|---|---------------------|
| 0 | automatic selection |
| 1 | assume VDD > 3.6 V |
| 2 | assume VDD =< 3.6 V |

SpecSettings.FORTE.PSoCRSTInit

integer

- | | |
|---|---------------|
| 0 | Reset mode |
| 1 | Power cycling |

SpecSettings.FORTE.MSP430osc

integer

- | | |
|---|---------------------------------------|
| 0 | Calibrated internal RC oscillator |
| 1 | Not calibrated internal RC oscillator |

SpecSettings.FORTE.MSP430speed

integer

- | | |
|---|---------|
| 0 | Normal |
| 1 | Slow |
| 2 | Slowest |

SpecSettings.FORTE.MSP430EraseSegmentA

boolean

If true, MSP430 Segment A is erased.

SpecSettings.FORTE.MSP430Interface

integer

- | | |
|---|------|
| 0 | JTAG |
| 1 | SBW |

SpecSettings.FORTE.ARMFreq

integer

The value specifies the frequency of connected oscillator or crystal. This value is used for programming of ARM7TDMI.

SpecSettings.FORTE.ARM OscType

integer

- | | |
|---|---------------|
| 0 | Crystal |
| 1 | Ext. Clock |
| 2 | Int.RC 32 kHz |

SpecSettings.FORTE.ARMCommFreq

integer

Selects communication frequency between FORTE programmer and the programmed chip. The frequencies are same as stated in the "Communication frequency" ComboBox in UP. 0 means the highest frequency, 1 is lower and so on.

SpecSettings.FORTE.SPI_Flash_Freq

integer

Selects communication frequency between FORTE programmer and the programmed chip. The frequencies are same as stated in the "Communication frequency" ComboBox in UP. 0 means the highest frequency, 1 is

lower and so on.

SpecSettings.FORTE.AVRXTAL.DELAY

integer

represents maximum AVR oscillator frequency

value can be found in *.lng files at item

MainForm.PRESTSpecForm.ComboAVRXTALPresto2.xxx.It
ems where xxx is minimum divisor of system clock of
selected AVR's SPI module. This is 2 for new AVRs, 3 and
4 for older AVRs and 24 for Atmel's 8051 arch.
processors.

This setting can be found in ini file too at
[SpecSettings.FORTE], XTALClk.

SpecSettings.FORTE.AVRXTAL.AutoClk

boolean

If true, faster programming with slow clock is used for
AVR MCUs.

SpecSettings.FORTE.AVRRSTInverse

boolean

If true, the reset signal polarity is assumed to be inverse
in comparison with standard polarity of the reset signal of
the selected chip. It is supported with AVR and 8051
devices.

SpecSettings.FORTE.AVRHVP

boolean

If true, high voltage method is used for AVR MCUs, it is
supported for AVR TPI interface only.

SpecSettings.FORTE.ATxmegalInterface

integer

0	PDI
1	JTAG

SpecSettings.FORTE.i2cSpeed

integer

0	100 kHz
1	400 kHz
2	1 MHz
3	Maximal

SpecSettings.FORTE.i2cAddr

integer

0	first suitable address or N/A
1	second suitable address

etc...

4.13 Appendix B: Use of ICSP

ICSP (In-Circuit Serial Programming) is a method of PIC
microcontroller programming making it possible to
program devices already placed on PCBs.

Two different algorithms may be used for PIC
microcontroller programming: HVP (using programming
voltage on pin -MCLR/VPP) or LVP (using the LVP pin).

The LVP programming algorithm can be disabled in the
device's configuration word. Microcontrollers have the
LVP algorithm enabled from the production, therefore
their PGM input needs to be treated during the first
programming (PGM input must be in log.0 for the time of
programming by means of the HVP algorithm).

Note: Not all devices have the PGM pin.

4.13.1 Pins Used for Programming

This chapter describes how to treat pins in the ICSP
programming mode in accordance with the programming
algorithm.

HVP Algorithm

- PGM pin (if the device has one) must be maintained in log. 0!!
- -MCLR/VPP must be separated from the resetting circuits (with a 10 kΩ resistor, for example).
A programming voltage is supplied to this pin P(VPP) for programming. The leading edge and the voltage level at VPP must not be influenced by the application. The PRESTO programmer supports only fixed voltage of 13 V on pin P(VPP) in contrast to adjustable voltage within a range of 6.5 V to 17 V supported by FORTE. Please check limit voltage value on pin -MCLR/VPP of the PIC device to be programmed by PRESTO.
- RB6 and RB7 pins must not be influenced by the application during programming.

LVP algorithm (without VPP)

- RB6, RB7, PGM and -MCLR/VPP pins must not be influenced by the application during programming. All pins are in various logical levels during programming.

Loading of Different Programmer Pins

The maximum current drawn from I/O pins, from pins P(VPP) and VDD can be found in the Technical Specification.

OTP (One-Time Programmable) devices have a considerably higher current consumption on pin P(VPP) than devices with a FLASH memory. Therefore the application should not have any additional current consumption at pin P(VPP) in case of OTP.

Data pins may have their signals changing at a speed of several MHz, so the application must not influence the signals in any significant way.

4.13.2 Power Supply Options

Connecting the shared data and power supply ground (GND) is obviously necessary for all cases. The microcontroller being programmed can be fed:

- externally from an application
- internally from a programmer

The external power supply from the application cannot be used for some types of microcontroller having the -MCLR/VPP pin alternatively configurable as an I/O.

The internal power supply can be used only in cases where the application does not draw too much current from programmer's feeding pin (VDD). The maximum allowed current consumption can be found in the Technical Specification.

Both PRESTO and FORTE programmers feature an overcurrent protection. PRESTO has a software protection in which an output gets disconnected by the running UP program having detected an overload. FORTE has a hardware protection, which does not depend on the control software.

The programmer switches the power supply off if the maximum load is substantially exceeded for a certain time (this time is adjustable). PRESTO checks for the overload state the whole time the power supply is connected.

Support for an external power supply is integrated in both PRESTO and FORTE hardware. The programmer feeds the input and output circuits with a voltage connected to pin VDD. The voltage may be lower than 5 V.

Advice

When designing the process, please pay special attention to the type of device to be programmed – if it can be not only operated but also programmed at a voltage lower than 5 V.

Power Supply Capacities in Application

If there are capacities present at the application's power-supply pin that would slow down the power on/off switching and application is fed from programmer during programming, longer charging/discharging times need to be set in UP. In other case UP will probably announce overcurrent on VDD pin.

An approximate time that should be set in the program:

$$t[\mu s] = 2.5 \times C[\mu F] \times R[\Omega].$$

The equivalent resistance is presented in table following table:

Programmer	Charging current	Discharging current
PRESTO	Corresponds to 50 Ω	Corresponds to 1 k Ω
FORTE	Corresponds to 50 Ω	Corresponds to 27 Ω

Table 9: Equivalent resistance of pin VDD

Example

The necessary charging time for an application with a 33 μF capacitor programmed with PRESTO:

$$2.5 \times 33 \times 50 = 4125 \mu s$$

discharging:

$$2.5 \times 33 \times 1000 = 82.5 \text{ ms.}$$

For further information on the setting see ► [Delay for VDD switching on/off when supplied from programmer.](#)

Notes

- An error may occur if UP cannot program the calibration word or if a fault occurs during Device ID reading, UP warns about an overcurrent at VDD, etc. This may be eliminated by prolonging the charging/discharging time in the ► [Delay for VDD switching on/off when supplied from programmer](#) option - up to several seconds.
- If UP points out an overcurrent error at VPP, a shorter ICSP cable may help (its maximum length is 15 cm).

4.13.3 ICSP Connector

All ASIX programmers use a unified connector with 2.54 mm spacing of pins for programming with the ICSP algorithm.

This connector has 8 pins with 7 signals. Not all signals are always needed for the programming itself.

For further information on connecting a device to the programmer see Connection Examples.

Pin No.	Signal	Programming connector
1	-MCLR	P / VPP
2		not used (key)
3	VCC	VDD
4	GND	GND
5	RB7	D / DATA
6	RB6	C / CLOCK
7		not used
8	RB3/RB4/RB5	L / LVP

Table 10: ICSP connector

The following drawing illustrates the recommended connection of -MCLR/VPP pin found in Microchip microcontrollers for device programming through the ICSP interface.

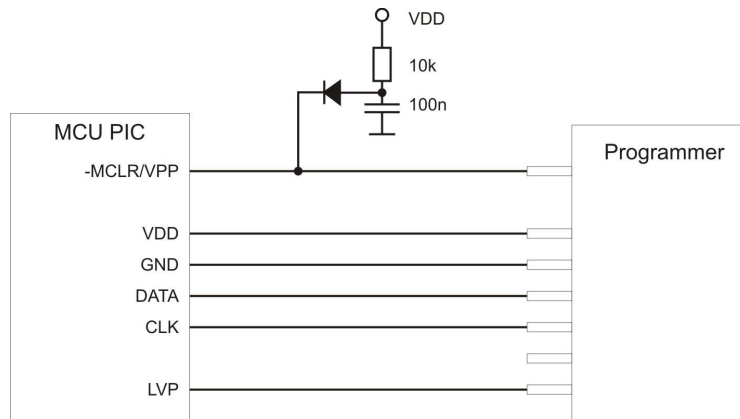


Fig.32: Recommended connection of -MCLR/VPP pin

4.14 Appendix C: Intel-HEX File Format

This appendix describes the format of Intel-HEX files used by UP for data reading and saving. .hex is the typical extension for such a file.

4.14.1 Supported Alternatives of HEX Files

UP supports 2 basic alternatives of Intel-HEX files:

- "basic", sometimes also 8-bit Intel-HEX File (e.g. Microchip MPASMWIN generates this file with parameter INHX8M).
- "extended", sometimes also 32-bit Intel-HEX File (e.g. Microchip MPASMWIN generates this file with parameter INHX32).

4.14.2 Description of Intel-HEX File Format

Intel-HEX are text files consisting of lines.

Each line has the following structure:

:LLAAAATTDDDD...CC

„:“ Each line in a file must start with this character (colon, 0x3A).

LL Length of record (number of DD fields).

AAAA Address of record's first byte.

TT Record type. The types may be:

00 - Data

01 - End of file. Each file must finish with this record.

02 - Extended segment address. (32-bit Intel-HEX only)

04 - Extended linear address. (32-bit Intel-HEX only)

There are also other types like 03 and 05, which are ignored by UP while reading and not used for saving.

DD Record data. The number of bytes must be exactly LL.

CC Checksum. The check sum is computed as a binary supplement to the sum of all values on the line.

Data Record

A line with the configuration memory of a 14-bit device is used here as an example.

:02400E00413F30

02	Record length. The configuration memory size is one word = 14 bit = 2 byte (byte alignment).
400E	Record address. The configuration memory address is the word 2007h addressed by bytes, i.e. 400Eh.
00	Record type = data
413F	Record data. Configuration word = 3F41h
30	Check sum. $30 = 02 + 40 + 0E + 00 + 41 + 3F = \text{xxD0}$; neg D0 = 30

End of File

The only acceptable alternative of the End of file line is:

:00000001FF

Extended Linear Address

Only files that need to address more than 64 kB of the addressed space contain this line.

For example, processors of the PIC18F family have their configuration memory saved at the address 0x 30 00 00 00.

If this address needs to be used, it is necessary to insert a line in the .hex file specifying the extended linear address, i.e. the upper 16 bites of the address. The lower 16 bits are read from the line with the data record.

:020000040030CA

This line selects the configuration memory of PIC18F family devices.

The extended segment records specify the segment, i.e. bits 19-4 of the address, which are then added to addresses from the data records (offset).

Saving Device Type in .hex File

Users frequently mistook the selected device type for the device type for which the .hex file was saved. To eliminate this, UP contains a function allowing you to save the device type in a file.

The program adds one more line below the End of File: **#PART=....** The absolute majority of programs working with Intel-HEX files ignore this line, but such a modified file cannot be considered as complying with the Intel-HEX format.

5

PRESTO.DLL Library

The **presto.dll** library has been designed for working together with the PRESTO programmer.

The implemented functions allow you to set logical levels at different programmer's pins as needed or to read their state. Various communication protocols can be created thanks to this.

The function **QsetPins()** is provided for controlling all pins that can work as an output, while the function **QGetPins()** serves for reading pins working as an input.

The function **QSendByte()** allows you to quickly send an SPI Byte to **data** and **clock** pins. If reading is needed at the same time, use the **QsendByte_OutIn()** function.

In addition there are functions for setting the programmer's characteristics, controlling the voltage or reading the return values.

This library can be used with all revisions of the PRESTO programmer regardless of the hardware version.

The functions implemented in the **presto.dll** library are described in detail in a separate document devoted to this library.

6

JTAG PLAYER

JTAG PLAYER is a utility designed for programming devices with the JTAG interface by means of PRESTO or FORTE programmers.

This utility is not part of the UP software installation pack but it can be downloaded separately from http://www.asix.cz/dwnld_jtag-svf-player.htm

JTAG PLAYER is localized only in English.

6.1 JTAG Device Programming

Having started JTAG PLAYER, select your programmer in **Options → Select Programmer**.

If you cannot see your connected programmer in the dialog window, check if the green ON-LINE LED on the programmer is on. If so, make sure that another software is not communicating with the programmer.

Program the device by choosing **File → Open&Process**. The file to be programmed must be in SVF/XSVF format. For more information on the file format see [SVF File](#) or [XSVF File](#).

If an error occurs during the programming process, check the connection between the programmer and the application. In addition, check the presence of a feeding voltage.

Important warning

A power supply voltage from an external source must be present during programming that utilizes the JTAG interface. The programmer does not feed the application in this case.

6.1.1 SVF File

SVF (Serial Vector Format) is a file used for describing high-level operations on the IEEE 1149.1 bus.

Serial Vector Format (.svf) **is the recommended file format for all the testing and programming except for Xilinx CPLD XC9500. The Xilinx Serial Vector Format (.xsvf)** is recommended for Xilinx CPLD XC9500.

Examples of How to Create SVF Files

This chapter presents methods of creating an SVF file for different types of device.

Atmel AVR (e.g. ATmega128) Programming

Generate an SVF file using the **avrsvf.exe** program available at the ATMEL website in the “Tools & Software of AVR 8-bit RISC MCUs” section.

Example:

```
avrsvf -datmega128 -s -e -ifmyfile.hex -pf -vf -  
ovmyfile.svf -mp
```

This example shows how to create an SVF file from the *myfile.hex* file. The final SVF file is then used by jtagplay.exe for erasing, programming and verification. **Run avrsvf -h** for more information.

The device must be in the reset state during programming.

Notes

Some AVR devices do not support page by page programming. In such a case, the SVF file must be created without the -mp parameter.

Lattice CPLD Programming

SVF file can be created from a .JED file using ispVM System. This program is part of the ispLEVER Classic system, which is available at the Lattice website.

Altera CPLD Programming

The QUARTUS II program by Altera can generate SVF files if it is set up so in the menu.

Such an SVF file, however, cannot be used as it is due to a wrong Silicon ID. According to Altera, SVF files generated by their software are assumed only for ATE (Automatic Test Equipment) programmers and Altera does not consider supporting others.

However, such an SVF file can be manually modified to suit our needs. In order to do so, delete the "CHECKING SILICON ID" section in the SVF file or mark it as a non-executable comment.

State of .svf File Implementation

The SVF file support has been implemented in accordance with the "Serial Vector Format Specification, Revision E" available at www.asset-intertech.com/support/svf.html with the following limitations:

- PIO a PIOMAP commands are not implemented.
- HDR+SDR+TDR / HIR+SIR+TIR length is limited to 2^{31} bits.
- Supported TCK frequencies are 3 MHz, 1.5 MHz, 750 kHz and fragments of 1 MHz starting at 500 kHz for PRESTO. FORTE adds 15 MHz, 10 MHz and 5 MHz on top of these.

- RUNTEST MAXIMUM max_time SEC parameter is ignored.
- UNTEST run_count is limited to $2^{31/3}$ (approximately 715 million).
- RUNTEST min_time SEC is limited to $2^{31/3}$ ms (approximately 715 seconds).
- TRST and RUNTEST SCK – these commands share the same configurable P/VPP pin of both the PRESTO and FORTE programmers and can never be used together.

6.1.2 XSVF File

XSVF (Xilinx Serial Vector Format) is a file used for describing high-level operations on the IEEE 1149.1 bus extended by Xilinx.

XSVF is recommended for Xilinx CPLD XC9500.

Examples of How to Create XSVF Files

Xilinx CPLD Programming

To create an XSVF file, use the iMPACT program available at the Xilinx website.

Choose **Prepare Configuration Files** → **Boundary-Scan File** → **XSVF File** in the **Operation Mode Selection** dialog window that opens after the iMPACT program starts. Run all operations (Erase, Program, Verify, Test...) the same way as if a programmer was connected (e.g. Xilinx Parallel Cable). Then save the new file and close iMPACT. Running the created XSVF file will perform the recorded operations.

We **do not recommend** using an SVF file for programming devices of the Xilinx XC9500 family, as the algorithm for XC9500/XL/XV device programming cannot be correctly described in the SVF format.

State of XSVF File Implementation

The XSVF file support has been implemented in accordance with the "XAPP503, Appendix B: XSVF File Format" specification available at the Xilinx website with the following limitations:

- XSETSDRMASKS, XSDRINC and XSIR2 commands are not implemented.
- Only the XSVF file format is recommended for programming the Xilinx XC9500/XV/XL families.

We seriously recommend using an SVF file for all architectures except XC9500/XV/XL. For XC9500/XV/XL programming, the use of the XSVF format is recommended as the SVF format does not include the XREPEAT command, which is necessary for XC9500/XV/XL programming.

Warning: Executing a file containing the XREPEAT command may be very slow.

6.1.3 Programming Connector

The following table describes the functions of PRESTO's and FORTE's pins for programming by means of the JTAG interface.

PRESTO	FORTE	Function
VPP	P	SCK (System Clock)/User defined state during file execution and after.
-	-	Not connected pin (key)
VDD	VDD	Feeding of I/O buffers
GND	GND	Ground of I/O buffers
MOSI	D	JTAG TDI (Test Data In)
CLOCK	C	JTAG TCK (Test Clock)
MISO	I	JTAG TDO (Test Data out)
LVP	L	JTAG TMS (Test Machine State)

Table 11: JTAG programming connector

6.2 Settings

This chapter explains the meaning of different settings in **Options** → **Program Options**.

6.2.1 Default TCK signal frequency

This frequency of the TCK clock is used until the JTAG Player reaches the first FREQUENCY command in the SVF file or until the FREQUENCY with the "default" value is reached.

The XSVF file format does not support the FREQUENCY default command. Therefore frequency defined by **Default TCK Signal Frequency** parameter is applied to all operations.

The maximum frequency is 3 MHz for the PRESTO programmer and 15 MHz for FORTE.

If the *Ignore FREQUENCY commands* option is selected, the programmer applies only the frequency set by the user and ignores all FREQUENCY commands.

6.2.2 Fast Clocks Option (FORTE only)

This option is available only for the FORTE programmer.

According to the JTAG specification, the signal at TDI is sampled at TCK's rising edge. However, should a higher frequency be required (around 5 MHz or more), it may be useful to change the moment of sampling from the rising edge to the falling edge by shifting it by 1/2 of the TCK period. To do so, choose **Fast Clock Option**.

6.2.3 RUNTEST without run_count (SVF only)

The programmer should stay in the specified state for the specified time and generate the clock signal on TCK while executing an SVF file.

The specified time can be exceeded, but it slows the programming process down. Even though it is not supported by the SVF specification, many programmable devices allow stopping the TCK clock during this time.

The programmer's ability to keep accurate time needs to be considered. A high level of accuracy cannot be achieved if the maximum frequency is used (the programmer can guarantee respecting the min_time SEC parameter only). A higher accuracy can be achieved with slow clock (~100 kHz). If the clock signal is not used at all, the programmer is capable of following the min_time SEC parameter almost exactly.

Three possibilities are available considering these facts:

- no clock on TCK

- slow clock on TCK (~100 kHz)
- default speed clock on TCK

Example: "RUNTEST 3E-3 SEC;" means "Generate clock on TCK for at least 3 ms".

6.2.4 RUNTEST Timing Multiply (both SVF and XSVF)

Recommended values:

- for accurate timing specified in the SVF or XSVF file: 0% (no added time)
- for XC9500(XL) family: 100% or more
- for Atmel AVR (e.g. ATmega128): 25%

6.2.5 RUNTEST with run_count and no timing (both SVF and XSVF)

This command should be interpreted as the minimum frequency on TCK.

Yet some SVF file generators (such as Xilinx IMPACT, for example) use this command as waiting time and assume a frequency of 1 MHz. For such cases the use of "interpret as RUNTEST min_time with scale 1 MHz" setting is recommended.

JTAG Player Behavior When Reaching RUNTIME Command With MINTIME Specification

(This concerns only SVF files as the RUNTEST alternative, which is usable in XSVF XRUNTEST run_count cannot specify time.)

- The RUNTEST command containing run_count and specifying min_time is executed at the currently running TCK frequency. Therefore the command can take much more time than what is specified in min_time.
- The RUNTEST command containing run_count and specifying max_time is executed at the currently running TCK frequency. As the programmer cannot respect the “deadline” specified in the max_time parameter, this parameter is ignored.

6.2.6 VPP PRESTO / P FORTE pin usage while running test (file) / after test completion

The selection of the VPP / P pin function: TRST or SCK as described in the SVF file or user-defined output levels. (This is useful to keep the device in the reset state during file execution.)

6.2.7 Default Settings

The JTAG Player features several default settings intended primarily for use in connection with FORTE, but not with PRESTO. Feel free to change these settings if the default values do not suit your application.

Default Settings for FPGAs

Default TCK frequency: 15 MHz; Ignore FREQUENCY commands

Fast Clock Option (FORTE only): 5 MHz and above

RUNTEST without run_count (SVF only): default speed clock on TCK

RUNTEST timing multiply (both SVF and XSVF): 0%

RUNTEST with run_count and no timing (both SVF and XSVF): interpret as RUNTEST min_time with scale 1 MHz

VPP PRESTO / P FORTE pin usage while running test (file): Tristate

VPP PRESTO / P FORTE pin usage after test completion: Tristate

Default Settings for XC9500

Default TCK frequency: 5 MHz; Ignore FREQUENCY commands

Fast Clock Option (FORTE only): 5 MHz and above

RUNTEST without run_count (SVF only): slow clock on TCK (~100 kHz)

RUNTEST timing multiply (both SVF and XSVF): 100%

RUNTEST with run_count and no timing (both SVF and XSVF): interpret as RUNTEST min_time with scale 1 MHz

VPP PRESTO / P FORTE pin usage while running test (file): Tristate

VPP PRESTO / P FORTE pin usage after test completion: Tristate

Default Settings for AVR:

Default TCK frequency: 1 MHz; Ignore FREQUENCY commands

Fast Clock Option (FORTE only): 5 MHz and above

RUNTEST without run_count (SVF only): default speed clock on TCK

RUNTEST timing multiply (both SVF and XSVF):
25%

RUNTEST with run_count and no timing (both SVF and XSVF): interpret as RUNTEST min_time with scale 1 MHz

VPP PRESTO / P FORTE pin usage while running test (file): Tristate

VPP PRESTO / P FORTE pin usage after test completion: Tristate

0	execution of the last file had no errors
1	an error occurred during execution of the last file
2	execution of the last file could not be started

6.3 Running JTAG Player from Command Line

SVF & XSVF JTAG Player can be run from the command line for more comfort especially during debugging. The following parameters apply:

```
jtagplay.exe [-p] [-f filename] [-i inifile] [-c] [-cc] [-s serial]
```

- p automatically executes the file specified in the -f filename parameter
- f *filename* specifies SVF / XSVF file to be executed
- i *inifile* ini file containing settings
- c closes the program if the file has been executed without errors
- cc closes the program even if the file has been executed with error(s)
- s *serial* uses PRESTO or FORTE programmer of the specified serial number
- forte uses FORTE, not PRESTO

Return Codes

The jtagplay.exe program returns the following return codes:

7

TROUBLE-SHOOTING

This chapter describes how to proceed if experiencing difficulties with device programming. It also describes testing utilities for PRESTO and FORTE programmers designed to check if the programmer is in good condition or damaged. Please go through all the tips and tricks before you send your programmer to a service shop.

The testing utilities are not part of the UP software installation, but they can be downloaded separately from http://tools.asix.net/supp_testers.htm.

7.1 Tips and Tricks

Should you experience difficulties with programming, we recommend checking the following points:

- Check the microcontroller and programmer connections according to the description in Connecting to Application. Even though it may seem trivial, it is recommended to check the connection twice and to assume the second time that the link does not always lead where you want it to or it leads to more than one point.
- If a crystal or other auxiliary devices are used for programming, (typically pull-down or pull-up resistors), check if their values and connections are correct.
- It is advisable (and often necessary) to have blocking capacitors at the power supply of the device to be programmed.
- If the device to be programmed has more than one power-supplying pin, all of them must be really fed. It is often recommended to check their voltage with a voltmeter.

- Use of the latest version of UP is recommended. If you are still using an older version, an update is recommended.
- Are you programming a new device or has it been previously programmed? If so, the problems may be caused by unsuitably set fuses in the device.
- The length of the ICSP cable should not exceed 15 cm.
- Make sure that there is no additional capacity present at the programming (data) pins. Consider if circuits on the programming pins could cause too large a load for programming.
- It is important that the crystal or the communication speed settings reflect the reality in devices that need that settings.
- Some devices may be programmed using several different methods. Programming problems may be caused by selecting a different programming interface or a different programming mode than the ones that the application is prepared for.

If none of the above tips help to eliminate the problem and if it is absolutely sure that the device to be programmed is not faulty, the fault may lie in the programmer.

To easily find out whether the programmer is in order or not, you can use the testing utilities described in the following chapters.

7.2 PRESTO Tester

The PRESTO Tester utility easily tests the “health state” (usability) of the PRESTO programmer right at the customer's site.

In order to run it successfully, only one PRESTO programmer may be connected to the control PC and its drivers must be correctly installed. This is confirmed by the green LED being on.



Fig.33: Tester PRESTO

After you start the tester, make sure that the programmer's output buffers are fed. You can either use the **5V from USB** option or connect an external power-supply voltage to the VDD pin. The level of detected voltage is displayed in the lower part of the **VDD&AUX** panel.

Basic communication with the programmer can easily be recognized by the **Active** diode being on. You can also use the **Test → USB Flood Test** menu option, which tests the USB communication with the programmer in both directions.

The programmer's serial number is displayed in the window title bar. This number is necessary for any communication with the service shop. You can also find this number on the bar code label attached to the programmer bottom.

Now you can switch logical levels for individual output pins (pins P, D, D and L) and check the output signal

quality using a voltmeter. At the same time, the input pins (pins P, D, I and L) indicate what logical level is currently seen by the programmer.

In addition, a pull-up resistor may be connected to pin D. This means that if its output is in the Tristate mode, pin D starts reading log. 1.

The programming voltage of 13 V can be connected to the output of pin P.

If everything seems to be in order, but the device still fails to get programmed, it is recommended to check the application connection according to instructions for connecting a microcontroller to the programmer.

If in doubt as to whether the programmer is in order or faulty, do not hesitate to contact our technical support.

8

Document history

Document revision	Modifications made
2013-07-03	Newly created document
2013-12-18	Minor text corrections
2014-02-28	New command line parameter [/read]
2014-07-01	CE certificate was replaced by Declaration of Conformity.
2014-09-23	Fixed I2C memory example picture. Described new option - Show only the lowest byte of word in ASCII
2014-11-21	Updated list of variables for up_dll.dll
2014-11-25	New settings of the UP program have been added.
2015-02-03	Added View/Console menu description. Added description of PIC32MZ_BootProg variable. Small text fixes.
2015-03-12	The name of item Delay for VDD switching on/off has been changed Added description of the checksum settings
2015-04-07	Updated description how to create SVF file for Lattice.
2015-05-19	Definition of input voltage on pins was added. Description of w=32 parameter for Windows messages was added.
2015-08-05	Description of the programmer driver installation has been changed. Added new /getpartrev parameter. Added new commandline errorcodes.
2015-09-21	Added description of the setting of the warning when the loaded file is not aligned to a word size.

	Fixed links.
2015-11-19	Added description of setting of the T pin during and after programming.
2016-01-22	The serial numbers logging description has been updated.
2016-03-08	Added description of the Display programmer form function. Added description of the setting which disables the VPP before VCC warning.
2016-05-20	The PE description has been updated. Added description of the start and end address for the SPI Flash memories.